2-Phase Closed-Loop Stepper Motor

Features

- Minimal heat generating, high torque motor (control voltage 55V)
- Higher cost-efficiency compared to conventional servo motors
- Available in motor frame size 20mm, 28mm, 35mm, 42mm, 56mm, 60mm







Line-up

[Frame size 20mm] [Frame size 28mm] [Frame size 35mm]




Please read "Safety Considerations" in operation manual before using.



[Frame size 42mm] [Frame size 56mm] [Frame size 60mm]

Ordering Information

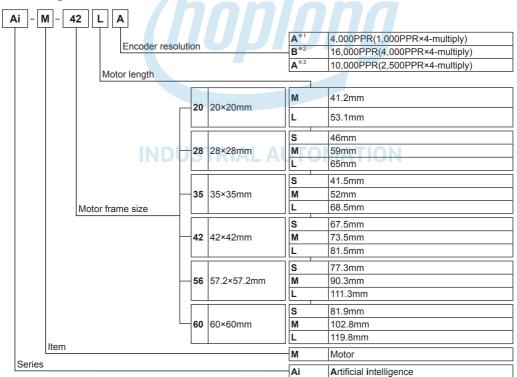

- ** 1: Encoder resolution for frame size 20mm motors. Microstep control for AiS driver, it controls up to 10,000PPR.
- * 2: Encoder resolution for frame size 28, 35mm motors.
- *3: Encoder resolution for frame size 42, 56, 60mm motors.

CÔNG TY CỔ PHẦN CÔNG NGHỆ HỢP LONG 2-Phase Closed-Loop Stepper Motor

Specifications

Motor

• Frame size 20mm

Model	Ai-M-20MA	Ai-M-20LA	
Max. holding torque ^{*1}	0.183kgf-cm (0.018N-m)	0.357kgf-cm (0.035N-m)	
Rotor moment of inertia	2g·cm ² (2×10 ⁻⁷ kg·m ²)		
Rated current	10.6A/Phase		
Resistance	6.6Ω/Phase ±10%	10.5Ω/Phase ±10%	
Inductance	2.1mH/Phase ±20%	4.0mH/Phase ±20%	
Weight**2	Approx. 0.192kg (approx. 0.092kg)	Approx. 0.219kg (approx. 0.120kg)	

• Frame size 28mm

Model	Ai-M-28SB	Ai-M-28MB	Ai-M-28LB
Max. holding torque ^{*1}	0.51kgf·cm (0.05N·m)	1.42kgf·cm (0.14N·m)	1.63kgf·cm (0.16N·m)
Rotor moment of inertia	9g·cm ² (9×10 ⁻⁷ kg·m ²)	12g·cm ² (12×10 ⁻⁷ kg·m ²)	18g·cm ² (18×10 ⁻⁷ kg·m ²)
Rated current	1.0A/Phase		
Resistance	78Ω/Phase ±10% 8.8 Ω/Phase ±10% 10.1 Ω/Phase ±10%		10.1Ω/Phase ±10%
Inductance	3.2mH/Phase ±20%	6.0mH/Phase ±20%	6.2mH/Phase ±20%
Weight ^{**2}	Approx. 0.260kg (approx. 0.162kg)	Approx. 0.318kg (approx. 0.222kg)	Approx. 0.342kg (approx. 0.248kg)

• Frame size 35mm

Model	Ai-M-35SB	Ai-M-35MB	Ai-M-35LB
Max. holding torque ^{*1}	0.714kgf-cm (0.07N-m)	1.326kgf·cm (0.13N·m)	3.162kgf·cm (0.31N·m)
Rotor moment of inertia	8g·cm ² (8×10 ⁻⁷ kg·m ²)	14g·cm² (14×10 ⁻⁷ kg·m²)	22g·cm ² (22×10 ⁻⁷ kg·m ²)
Rated current	1.2A/Phase		
Resistance	2.1Ω/Phase ±10%	3.25Ω/Phase ±10%	5.0Ω/Phase ±10%
Inductance	1.25mH/Phase ±20%	2.85mH/Phase ±20%	5.6mH/Phase ±20%
Weight ^{*2}	Approx. 0.278g (approx. 0.180kg)	Approx. 0.347kg (approx. 0.250kg)	Approx. 0.456kg (approx. 0.366kg)

• Frame size 42mm

Model	Ai-M-42SA	Ai-M-42MA	Ai-M-42LA
Max. holding torque*1	ng torque ^{×1} 2.55kgf·cm (0.25N·m) 4.08kgf·cm (4.89kgf-cm (0.48N-m)
Rotor moment of inertia	35g·cm ² (35×10 ⁻⁷ kg·m ²)	54g·cm ² (54×10 ⁻⁷ kg·m ²)	77g·cm² (77×10 ⁻⁷ kg·m²)
Rated current	1.7A/Phase INITIAL ALITON ATION		
Resistance	1.7Ω/Phase ±10%	1.85Ω/Phase ±10%	2.1Ω/Phase ±10%
Inductance	ductance 1.9mH/Phase ±20% 3.5mH/Phase ±20%		4.4mH/Phase ±20%
Weight**2	Approx. 0.45kg (approx. 0.34kg)	Approx. 0.52kg (approx. 0.41kg)	Approx. 0.59kg (approx. 0.48kg)

• Frame size 56mm

Model	Ai-M-56SA	Ai-M-56MA	Ai-M-56LA
Max. holding torque ^{*1}	6.12kgf·cm (0.6N·m)	2kgf-cm (0.6N-m) 12.24kgf-cm (1.2N-m) 2	
Rotor moment of inertia	140g·cm ² (140×10 ⁻⁷ kg·m ²)	0×10 ⁻⁷ kg·m²) 280g·cm² (280×10 ⁻⁷ kg·m²) 480g·cm² (
Rated current	3.5A/Phase		
Resistance	ance $0.55\Omega/\text{Phase} \pm 10\%$ $0.57\Omega/\text{Phase} \pm 10\%$ 0		0.93Ω/Phase ±10%
Inductance	1.05mH/Phase ±20%	mH/Phase ±20% 1.8mH/Phase ±20% 3.7mH/Phase ±20%	
Weight ^{**2}	Approx. 0.76kg (approx. 0.62kg)	Approx. 0.99kg (approx. 0.85kg)	Approx. 1.36kg (approx. 1.22kg)

• Frame size 60mm

- I Tallic Size collilli			
Model	Ai-M-60SA	Ai-M-60MA	Ai-M-60LA
Max. holding torque*1	11.22kgf-cm (1.1N-m)	22.43kgf-cm (2.2N-m)	29.57kgf·cm (2.9N·m)
Rotor moment of inertia	240g·cm² (240×10 ⁻⁷ kg·m²)	490g·cm ² (490×10 ⁻⁷ kg·m ²)	690g·cm² (690×10 ⁻⁷ kg·m²)
Rated current	current 3.5A/Phase		
Resistance	1.0Ω/Phase ±10%	1.23Ω/Phase ±10%	1.3Ω/Phase ±10%
Inductance	1.5mH/Phase ±20%	2.6mH/Phase ±20%	3.8mH/Phase ±20%
Weight**2	Approx. 0.89kg (approx. 0.75kg)	Approx. 1.27kg (approx. 1.13kg)	Approx. 1.58kg (approx. 1.44kg)

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

> K) imers

L) 'anel leters

(M) Tacho / Speed / Pulse Meters

0)

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

> S) Field Network Devices

Γ) oftware


X2: The weight includes packaging. The weight in parenthesis is for unit only.

Specifications

• Common specifications

	•		
Standard step angle		1.8°/0.9° (Full/Half step)	
Motor phase		2-phase	
Run method		Bipolar	
Insulation cla	ss	B type (130°C)	
Insulation res	istance	Over 100MΩ (at 500VDC megger), between motor coil-case	
Dielectric stre	ngth	500VAC 50/60Hz for 1 min between motor coil-case	
Vibration		1.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
Shock		Approx. max. 50G	
F	Ambient temperature	0 to 50°C, storage: -20 to 70°C	
Environment	Ambient humidity	20 to 85%RH, storage: 15 to 90%RH	
Approval		CE	
Protection str	ucture	IP30 (IEC34-5 standard)	
Stop angle er	ror ^{×1}	±0.09°	
Shaft vibration	n ^{**2}	0.03mm T.I.R.	
	Frame size 20, 28, 35mm	Max. 0.025mm (load 450g)	
Movement**3	Frame size 42, 56, 60mm	Max. 0.025mm (load 25N)	
	Frame size 20, 28, 35mm	Max. 0.05mm (load 920g)	
Movement*4	Frame size 42, 56, 60mm	Max. 0.01mm (load 50N)	
Concentricity	for shaft of setup in-low	0.05mm T.I.R.	
Perpendicularity of set-up plate shaft		0.075mm T.I.R.	

- X1: Specifications are for full-step angle, without load. (values may vary by load size)
- **X2: T.I.R.** (Total Indicator Reading)
 - Indicates total quantity of dial gauge in case of 1 rotation of measuring part around the reference point.
- **3: Amount of radial shaft displacement when adding a radial load (450g for frame size 20, 28, 35mm and 25N for frame size 42, 56, 60mm) to the tip of the motor shaft.
- **4: Amount of axial shaft displacement when adding a axial load (920g for frame size 20, 28, 35mm and 50N for frame size 42, 56, 60mm) to the shaft.
- XEnvironment resistance is rated at no freezing or condensation.

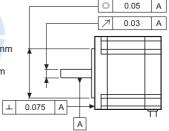

© Encoder

• Frame size 20, 28, 35mm

Item		Magnetic incremental rotary encoder	
alution	Frame size 20mm ^{*1}	4,000PPR (1,000PPR×4-multiply)	
olution	Frame size 28, 35mm	16,000PPR (4,000PPR×4-multiply)	
Output phase	INI	A, A, B, B, Z, Z phase	
Output duty rate		$\frac{1}{2} \pm \frac{1}{3}$ (T=1 cycle of A phase)	
Phase difference of output		Output between A and B phase: $\frac{T}{4} \pm \frac{T}{4}$ (T=1 cycle of A phase)	
Control output	Line driver output	• [Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC== • [High] - Load current: max20mA, output voltage: min. 2.5VDC==	
Response time	Frame size 20mm	Max. 1.5μs (cable length: 2m, I sink = 20mA)	
(rise, fall)	Frame size 28, 35mm	Max. 1µs (cable length: 2m, I sink = 20mA)	
Max. response	Frame size 20mm	200kHz	
frequency	Frame size 28, 35mm	1,000kHz	
Power supply		5VDC== ±5% (ripple P-P: max. 5%)	
Current consumption		Max. 50mA (disconnection of the load)	
	Output phase Output duty rate Phase difference Control output Response time (rise, fall) Max. response frequency Power supply	Frame size 20mm*1 Frame size 28, 35mm Output phase Output duty rate Phase difference of output Control output Response time (rise, fall) Max. response Frame size 20mm Frame size 28, 35mm Frame size 20mm Frame size 20mm Frame size 20mm Frame size 23, 35mm	


X1: Microstep control for AiS driver, it controls up to 10,000PPR.

• Frame size 42. 56. 60mm

_	, , , , , , , , , , , , , , , , , , , ,				
Iten	Item		Incremental rotary encoder		
Resolution			10,000PPR (2,500PPR×4-multiply)		
	Output phase		$A, \overline{A}, B, \overline{B}, Z, \overline{Z}$ phase		
ation	Output duty rate		$\frac{T}{2} \pm \frac{T}{4}$ (T=1 cycle of A phase)		
pecifica	Phase difference	e of output	Output between A and B phase: $\frac{T}{4} \pm \frac{T}{8}$ (T=1 cycle of A phase)		
8	Control output	Line driver output	• [Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC • [High] - Load current: max20mA, output voltage: min. 2.5VDC		
tic	Response time	(rise, fall)	Max. 0.5µs (cable length: 2m, I sink = 20mA)		
Electric	Max. response frequency		300kHz		
Т Ш	Power supply		5VDC== ±5% (ripple P-P: max. 5%)		
	Current consumption		Max. 50mA (disconnection of the load)		


công từ cổ phần công nghệ hợp tong 2-Phase Ciosed-Loop Stepper Motor

Encoder Control Output Diagram

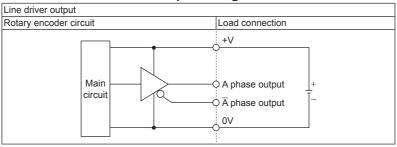

XAll output circuits of A, \overline{A} , B, \overline{B} , Z, \overline{Z} phase are the same

Encoder Output Waveforms

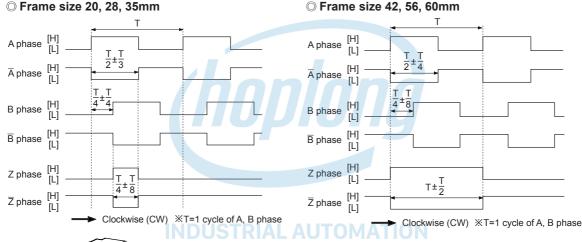

(N) Display Units

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Power Controllers

(J) Counters


(O) Sensor Controllers

(P) Switching Mode Powe Supplies

(R) Graphic/ Logic Panels


Connection Diagram

Autonics 2 phase closed-loop stepper motors take bipolar wiring methods. The wiring colors for each phase and lead-wire are as the followings:

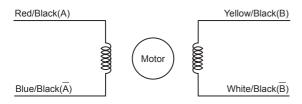


Dimensions

O Frame size 20mm

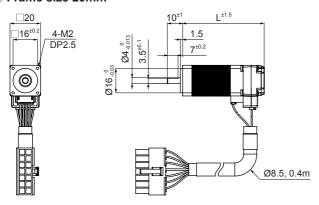


Model	L
Ai-M-20MA	41.2
Ai-M-20LA	53.1

O Frame size 28mm

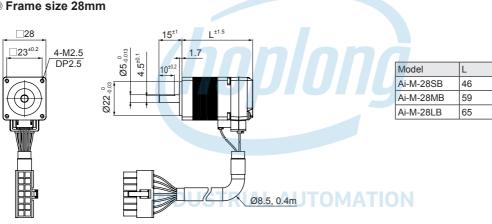

O Frame size 35mm

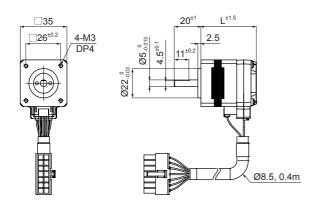


Model	L
Ai-M-35SB	41.5
Ai-M-35MB	52
Ai-M-35LB	68.5

Q-6

Hotline: 1900.6536 - Website: HOPLONGTECH.COM

CÔNG TY CỔ PHẨN CÔNG NGHỆ HỢP LONG 2-Phase Closed-Loop Stepper Motor

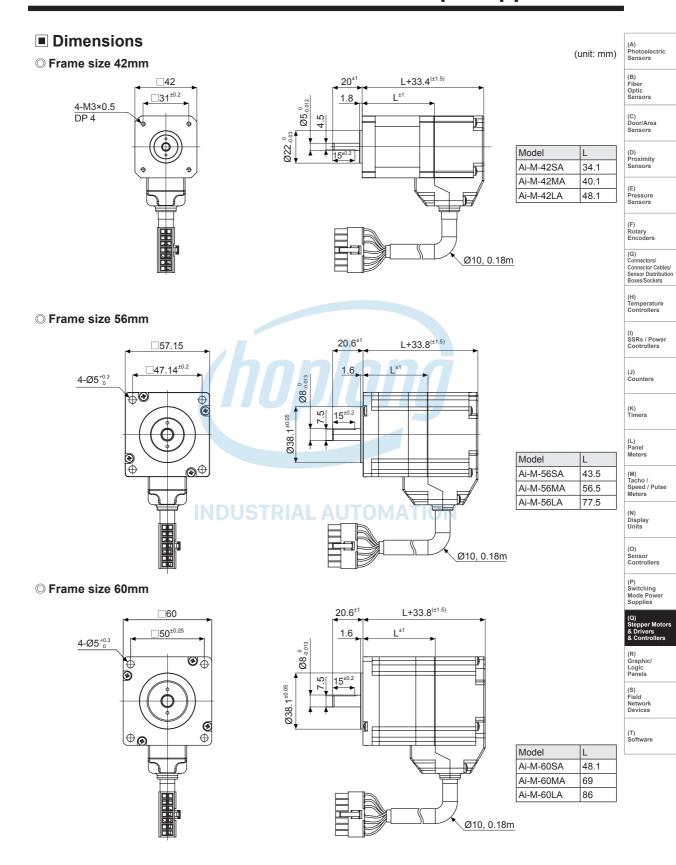

■ Motor Characteristics O Frame size 20mm O Frame size 28mm Lordue[kgf.cm] 0.35 0.35 0.25 ΓAi-M-20LA Torque[kgf·cm] Ai-M-28LB 1.8 Ai-M-28MB 1.6 1.4 1.2 Ai-M-20MA 0.2 Ai-M-28SB 0.8 0.15 0.6 0.1 0.4 0.05 0.2 10 100 1000 10 100 1000 Speed [rpm] Speed [rpm] O Frame size 35mm Torque[kgf·cm] 4 Ai-M-35LB 3.5 3 2.5 Ai-M-35MB 2 1.5 Ai-M-35SB 1 0.5 0 1000 10 Speed [rpm] O Frame size 42mm Frame size 56mm Torque[kgf·cm] Torque[kgf·cm] 5 20 Ai-M-42LA Ai-M-56LA Ai-M-42MA 15 3 Ai-M-42SA Ai-M-56MA 10 2 Ai-M-56SA 5 0 L 10 0₁0 3000 100 1000 100 1000 3000 Speed [rpm] Speed [rpm] Frame size 60mm Torque[kgf·cm] Ai-M-60LA 25 Ai-M-60MA 20 15 Ai-M-60SA 10 5

Speed [rpm]

công từ cổ phần công nghệ hợp tong 2-Phase Ciosed-Loop Stepper Motor

Connection Connectors of Motor

O CN2: Motor+Encoder Connector

Pin ar	rangement		Pin no.	Function	Pin no.	Function
		1	GND	8	+5VDC	
		2	ENCODER A	9	ENCODER Ā	
		3	ENCODER B	10	ENCODER B	
	8901734 1234567		4	ENCODER Z	11	ENCODER Z
			5	GND EARTH	12	N·C
			6	MOTOR A	13	MOTOR B
			7	MOTOR Ā	14	MOTOR B
T			Specifications			Manufactura
Туре			Connector	Connector terminal	Housing	Manufacture
CNIO	Motor+	Frame size 20, 28, 35mm	5557 44D	5556T2		Malau

5556T

**Above connectors are suitable for Ai-M Series. You can use equivalent or substitute connectors.

5557-14R

O Cable (sold separately)

Encoder

CN2

Туре	Model		
Motor+Encoder cable	Normal	Moving	
	C1D14M-□ ^{×1}	C1DF14M-□ ^{×1}	

※1: ☐ indicates cable length (1, 2, 3, 5, 7, 10).

E.g.) C1DF14M-10: 10m moving type motor+encoder cable.


Frame size 42, 56, 60mm

■ Motor Installation

1. Mounting direction

Motor can be mounted in any directions-facing up, facing down and side ways.

No matter which direction motors to be mounted, make sure not to apply overhung or thrust load on the shaft. Refer to the table below for allowable shaft overhung load / thrust load.

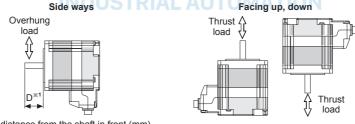


X1: The distance from the shaft in front (mm)

Motor size	The distance from	The distance from the shaft in front (mm), Allowable overhung load [kgf (N)]			
	D=0	D=5	D=10	D=15	thrust load
Frame size 20mm	1.22 (12)	1.53 (15)	<u> </u>	_	
Frame size 28mm	2.55 (25)	3.46 (34)	5.3 (52)	_	
Frame size 35mm	2 (20)	2.55 (25)	3.46 (34)	5.3 (52)	Under the load of
Frame size 42mm	2 (20)	2.6 (25)	3.5 (34)	5.3 (52)	motor
Frame size 56mm	F F (FA)	6.9.(67)	0.4 (90)	12.2 (120)	
Frame size 60mm	5.5 (54)	6.8 (67)	9.1 (89)	13.3 (130)	

Do not apply excessive force to motor cable when mounting motors.

Do not forcibly pull or insert the cable. It may cause poor connection or disconnection of the cable by force. In case of frequent cable movement required application, proper safety countermeasures must be ensured.

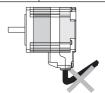

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary

Molex

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperatur Controllers

(I) SSRs / Power Controllers

(J) Counters

(M)

Speed / Puls Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Powe Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

T) Software

Motor Installation


2. Mounting method

With considering heat radiation and vibration isolation, mount the motor as tight as possible against a metal panel having high thermal conductivity such as iron or aluminum.

When mounting motors, use hexagon socket screws, hexagon nuts, spring washers and flat washers.


Refer to the table below for allowable thickness of mounting plate and using bolt.

○ Frame size 20mm

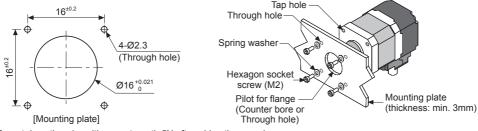


XDo not draw the wire with over strength 5N after wiring the encoder.

O Frame size 28mm

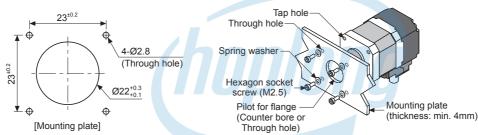


XDo not draw the wire with over strength 5N after wiring the encoder.

○ Frame size 35mm

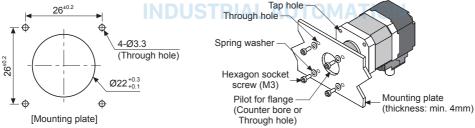

XDo not draw the wire with over strength 5N after wiring the encoder.

O Frame size 42mm

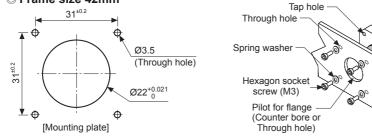


XDo not draw the wire with over strength 30N after wiring the encoder.


Mounting plate


(thickness: min. 4mm)


công từ cổ phần công nghệ hợp tong 2-Phase Ciosed-Loop Stepper Motor

Frame size 56mm/60mm

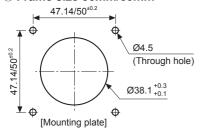

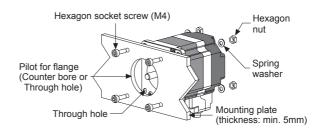

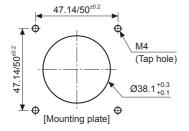

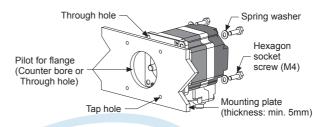

XDo not draw the wire with over strength 30N after wiring the encoder.


3. Connection with load

When connecting the load, be sure of the center, tension of the belt, and parallel of the pulley.

When connecting the load such as a pulley, a belt, be sure of the allowable thrust load, radial load, and shock.

Tighten the screw for a coupling or a pulley not to be unscrewed.

When connecting a coupling or a pulley on the motor shaft, be sure of damage of the motor shaft and the motor shaft bearing. Do not disassemble or modify the motor shaft to connect with the load.

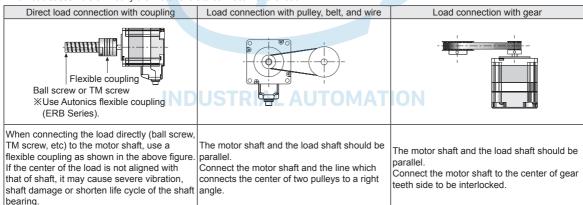

4. Installation condition

Install the motor in a place that meets certain conditions specified below.

It may cause product damage if it is used out of following conditions.

1 Inside of the housing which is installed indoors

(This unit is manufactured for the purpose of attaching to equipment. Install a ventilation device.)

②Within 0 to 50°C (at non-freezing status) of ambient temperature

③Within 20 to 85%RH (at non-dew status) of ambient humidity

4) The place without explosive, flammable and corrosive gas

⑤The place without direct ray of light

@The place where dust or metal scrap does not enter into the unit

The place without contact with water, oil, or other liquid

®The place without contact with strong alkali or acidity

The place where easy heat dissipation could be made

@The place without continuous vibration or severe shock

The place with less salt content

@The place with less electronic noise occurs by welding machine, motor, etc.

®The place where no radioactive substances and magnetic fields exist. It shall be no vacuum status as well.

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(F) Rotary Encode

Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Powe Controllers

(J) Counters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Powe Supplies

(R) Graphic/ Logic Panels

Troubleshooting

- 1. When motor does not rotate
 - ①Check the connection status between controller and driver, and pulse input specifications (voltage, width).
 - ②Check the pulse and direction signal are connected correctly.
- 2. When motor rotates to the opposite direction of the designated direction
 - ①When RUN mode is 1-pulse input method, CCW input [H] is for forward, [L] is for backward.
 - @When RUN mode is 2-pulse input method, check CW and CCW pulse input are changed or not.
- 3. When motor drive is unstable
 - ①Check that driver and motor are connected correctly.
 - ②Check the driver pulse input specifications (voltage, width).

Proper Usage

- 1. Follow instructions in 'Proper Usage'.
 - Otherwise, it may cause unexpected accidents.
- 2. Using motors at low temperature may cause reducing ball bearing's grease consistency and friction torque is increased. Start the motor in a steady manner since motor's torque is not to be influenced.
- 3. If wiring encoder cable, separate it from high voltage line or power cable for preventing surge and inductive noise. The cable length should be as short as possible.
 - Failure to follow this instruction may result in raised cable resistance, residual voltage, and output waveform noise
- 4. Must connect the encoder shield cable to the F.G. terminal.
- 5. For using motor, it is recommended to maintenance and inspection regularly.
 - ①Unwinding bolts and connection parts for the unit installation and load connection
 - ②Strange sound from ball bearing of the unit
 - 3 Damage and stress of lead cable of the unit
 - 4 Connection error with driver
 - (a) Inconsistency between the axis of motor output and the center, concentric (eccentric, declination) of the load, etc.
- 6. This unit may be used in the following environments.
 - ①Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2,000m
 - ③Pollution degree 2
 - (4) Installation category II

INDUSTRIAL AUTOMATION