

Sensor Connector Terminal Block

■ Features

- Quicker and easier wiring with sensor connectors [wire mount plug (CNE-P□□□, sold separately)]
- Wire stripping and other tools not required
- Compact, space-saving design
- Easily check operation status and cable connection with LED light
- 2 mounting methods (DIN rail, screw mount)
- Choose NPN or PNP input with NPN/PNP selection switch

※Autonics sensor connector wire plug (CNE Series) is recommended. Please refer to page D-2 to 5.

※Autonics I/O cable CJ Series is recommended. Please refer to page B-2.

⚠ Please read "Caution for your safety" in operation manual before using.




■ Model

Model	Item	Connector type for primary	For secondary		No. of sensor connectors	LED	Case
			Connector type	No. of connector pins			
AFE4-H20-16LF	Interface terminal block	Sensor connector 4-pin socket	Hirose connector	20-pin	16 EA	Yes	Full case type
AFE4-H40-32LF				40-pin	32 EA		

■ Example Of Sensor Connector Terminal Block Connection

◎ Connection AFE4-H20-16LF and 40-point I/O module PLC using branch cable

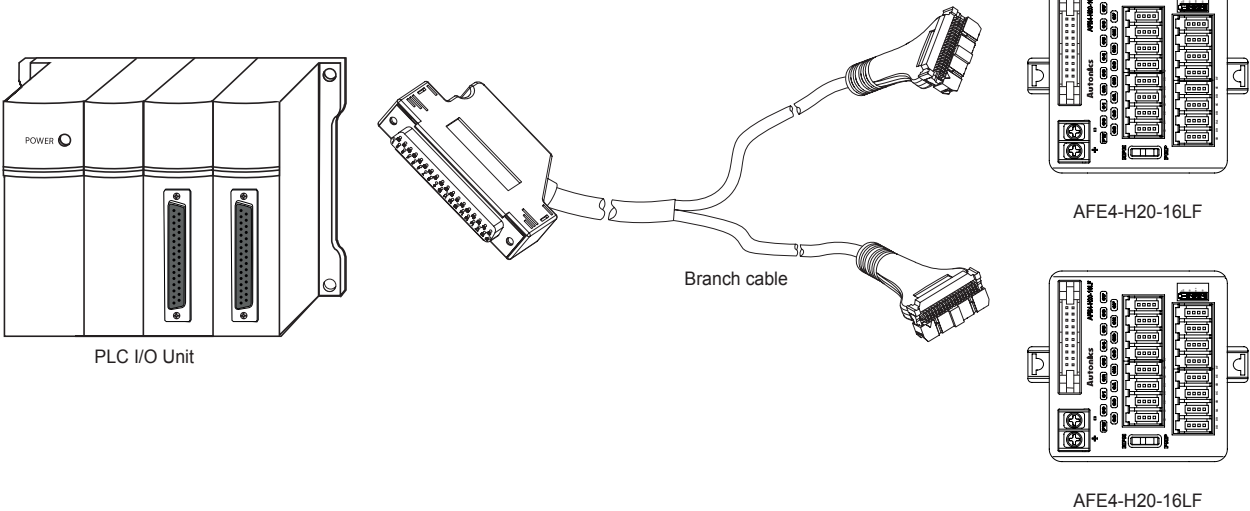

I/O Terminal Blocks

- AFS(Interface Terminal Block)
- AFI/AFR(Interface Terminal Block)
- ACS(Common Terminal Block)
- AFE(Sensor Connector Terminal Block)
- ABS(Relay Terminal Block)
- ABL(Relay Terminal Block)
- Power Relay

I/O Cables

- MITSUBISHI
- LSIS
- Autonics
- RS Automation
- YOKOGAWA
- FUJI
- KDT
- OMRON
- TELEMECANIQUE
- For SERVO
- Open Type Cables
- Cable Appearance

Remote I/O

- ARD(DeviceNet Digital Standard Terminal Type)
- ARD(DeviceNet Digital Sensor Connector Type)
- ARD(DeviceNet Analog Standard Terminal Type)
- ARM(Modbus Digital Sensor Connector Type)

Others

- Sensor Connectors
- Sockets
- Sensor Distribution Boxes
- Valve Plugs
- Thumbwheel Switches

## Specifications

Model		AFE4-H20-16LF	AFE4-H40-32LF
Power supply		12-24VDC	
Allowable voltage range		90 to 110% of rated voltage	
Rated current		Max. 1A ※1	
No. of connector pins		20-pin	40-pin
No. of sensor connectors		16 EA	32 EA
Insulation resistance		Min. 1,000MΩ (at 500VDC megger)	
Dielectric strength		600VAC 50/60Hz for 1 min.	
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55 Hz (for 1 min.) in each X, Y, Z direction for 1 hour	
	Malfunction	0.75mm amplitude at frequency of 10 to 55 Hz (for 1 min.) in each X, Y, Z direction for 10 min.	
Shock	Mechanical	150m/s <sup>2</sup> (15G) in each X, Y, Z direction for 3 times	
	Malfunction	100m/s <sup>2</sup> (10G) in each X, Y, Z direction for 3 times	
Environment	Ambient temperature	-15 to 55°C, storage: -25 to 65°C	
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH	
Material		CASE, BASE: PC	
Tightening torque		7.14 to 8.16 kgf·cm (0.7 to 0.8 N·m)	
Approval		CE c RU S	
Weight※2		Approx. 121g (approx. 69g)	Approx. 203g (approx. 119g)

※1: The rated current includes LED current of terminal block.


※2: The weight includes packaging. The weight in parentheses is for unit only.

※Environment resistance is rated at no freezing or condensation.

## Dimensions


### • AFE4-H20-16LF

(unit: mm)


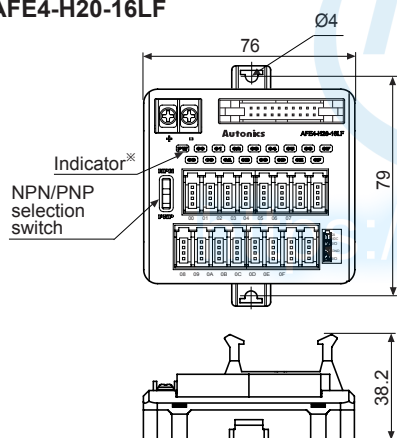


※Factory default of NPN/PNP selection switch is NPN.


※Indicator (PW: red LED, operation and disconnection: blue LED)

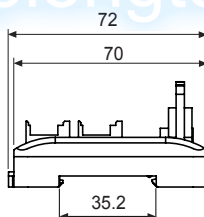

### • AFE4-H40-32LF

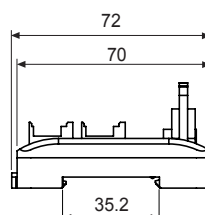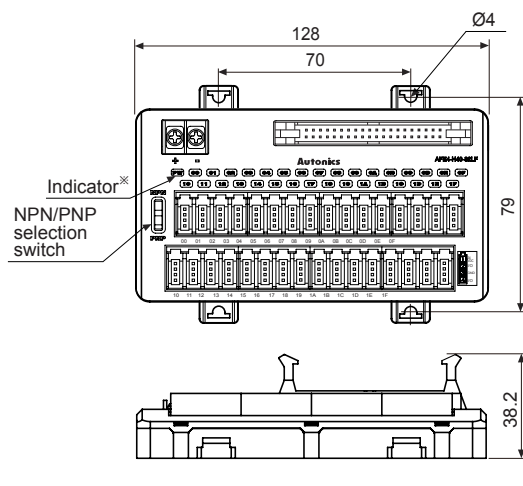

## ■ Sensor Connector Wire Mount Plug Specifications

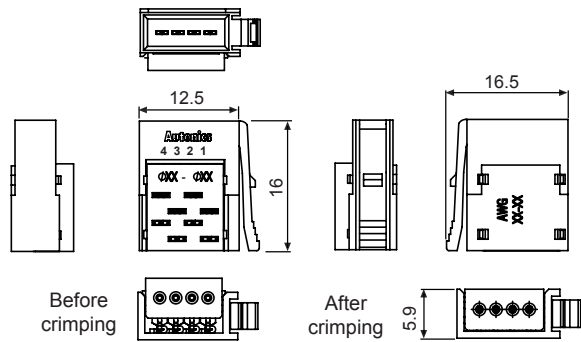

(unit: mm)

※Sensor connector wire mount plug is sold separately.  
Please refer to page D-2 to 5.

### ● Cover color and wire specifications for sensor connector wire mount plug

Model	Cover color	Applicable wire	
		Normal cross section area (mm <sup>2</sup> )	Cover diameter (mm)
CNE-P04-WT	Transparent (WT)	0.05 to 0.08 (AWG30 to 28)	0.6 to 0.8
CNE-P04-YG	Yellow-Green (YG)		0.8 to 1.0
CNE-P04-VT	Violet (VT)		1.0 to 1.2
CNE-P04-RE	Red (RE)	0.13 to 0.21 (AWG26 to 24)	0.8 to 1.0
CNE-P04-YW	Yellow (YW)		1.0 to 1.2
CNE-P04-OG	Orange (OG)		1.2 to 1.6
CNE-P04-GN	Green (GN)	0.32 to 0.5 (AWG22 to 20)	1.0 to 1.2
CNE-P04-BL	Blue (BL)		1.2 to 1.6
CNE-P04-GY	Gray (GY)		1.6 to 2.0



## ■ How To Crimp Sensor Connector Wire Plug

### 1) Inserting the wires


- Check the pin numbers and insert the wires into the according holes.
- Check that the wires are fully inserted to the end of the cover.

### 2) Crimping

- Insert the cover into the body with a jig (press fitting plier, etc).
- ※Apply pressure with the jig from the side, as shown in the figure below.

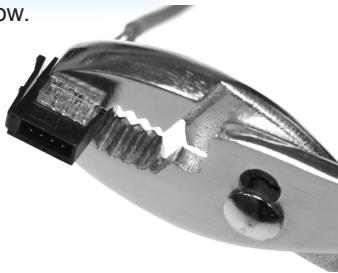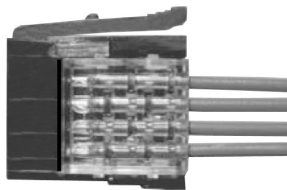

## ■ Terminal Arrangement Of Sensor Connector Socket

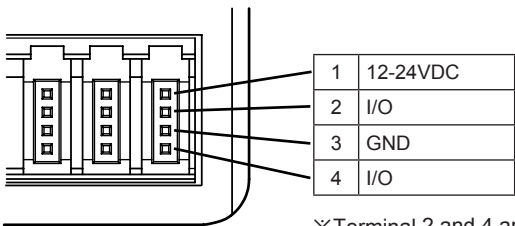

※Terminal 2 and 4 are connected inside.

### I/O Terminal Blocks

AFS(Interface Terminal Block)
AFL/AFR(Interface Terminal Block)
ACS(Common Terminal Block)
AFE(Sensor Connector Terminal Block)
ABS(Relay Terminal Block)
ABL(Relay Terminal Block)
Power Relay

### I/O Cables

MITSUBISHI
LSIS
Autonics
RS Automation
YOKOGAWA
FUJII
KDT
OMRON
TELEMECANIQUE
For SERVO
Open Type Cables
Cable Appearance

### Remote I/O


ARD(DeviceNet Digital Standard Terminal Type)
ARD(DeviceNet Digital Sensor Connector Type)
ARD(DeviceNet Analog Standard Terminal Type)
ARM(Modbus Digital Sensor Connector Type)

### Others


Sensor Connectors
Sockets
Sensor Distribution Boxes
Valve Plugs
Thumbwheel Switches

## ■ Connections


### • AFE4-H20-16LF

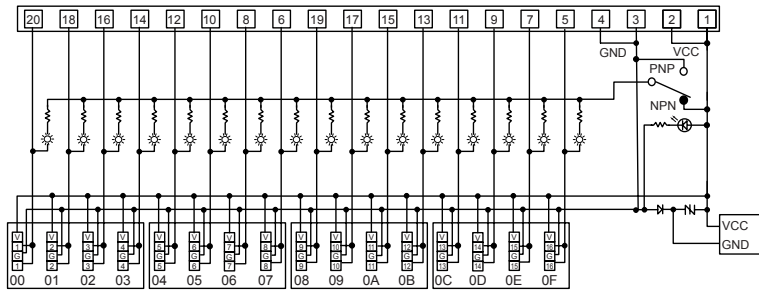

※Hirose connector Model  
: HIF3BA-40PA-2.54DSA

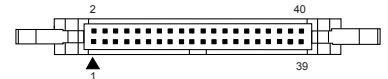

### • AFE4-H40-32LF

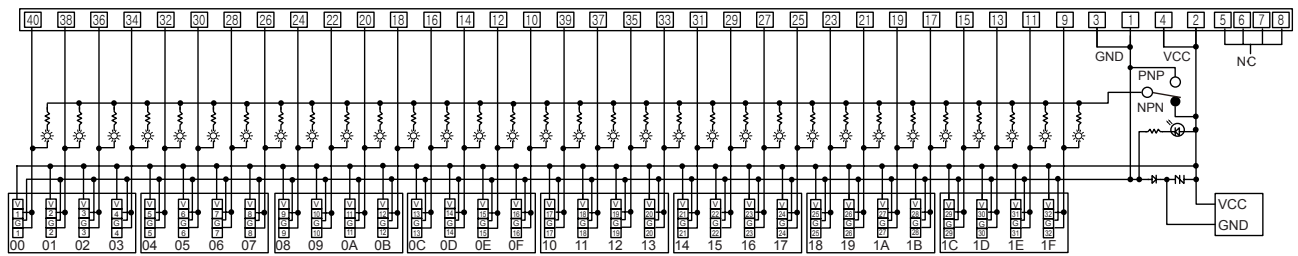

## ■ Installation

### ○ Mounting and removal at DIN rail


#### • Mounting

- 1) Pull the rail lock towards direction ①.
- 2) Attach the DIN rail connection hook onto the DIN rail.
- 3) Push the unit towards direction ②, then push the rail lock in to lock into position.


#### • Removal

- 1) Insert a screwdriver into the rail lock hole and pull it towards direction ①.
- 2) Remove the unit by pulling the unit towards direction ②.

< Mounting >

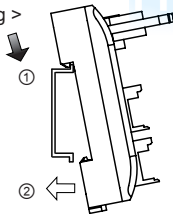


< Removal >

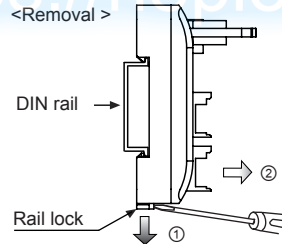

### ○ Mounting with screws

- 1) The unit can be mounted on panels using the mounting holes on the rear rail locks.
- 2) M4×15mm spring washer screws are recommended for installation. When using flat washers, use Ø6mm diameter washers. The tightening torque should be between 7.14 and 10.2 kgf·cm (0.7 to 1.0N·m).

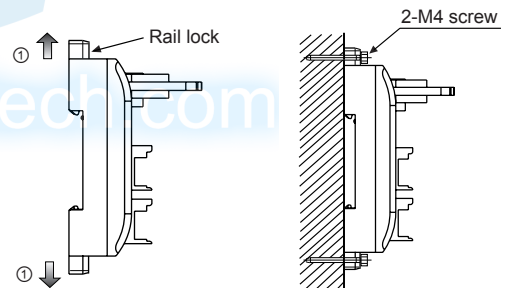

## ■ Caution During Use

1. Do not use the product outside of rated temperature and humidity.
2. Check to make sure that voltage fluctuation in the power supply is within the rated range.
3. When connecting PLC or other controllers, check the power polarity before wiring.
4. Use AWG 16 (1.25mm<sup>2</sup>) wire for power.
5. Do not use NPN output sensor and PNP output sensor simultaneously.
6. Do not use the unit in the following environments.
  - ① Environments with high vibration or shock.
  - ② Environments where strong alkalis or acids are used.
  - ③ Environments with exposure to direct sunlight.
  - ④ Near machinery which produce strong magnetic force or electric noise
7. In case of 24VDC signal input, isolated and limited voltage/current or Class2 source should be provided for power supply.
8. This unit may be used in the following environments.
  - ① It shall be used indoor.
  - ② Altitude up to 2,000m
  - ③ Pollution degree 2
  - ④ Installation category II