

Leader in Electrics & Automation



Safety Instructions

- For your safety, please read user's manual thoroughly before operating.
- Contact the nearest authorized service facility for examination, repair, or adjustment.
- Please contact qualified service technician when you need maintenance.
Do not disassemble or repair by yourself!
- Any maintenance and inspection shall be performed by the personnel having expertise concerned.

New micro size drive
of LS Industrial Systems

STARVERT *iE5*

Optimum solution for small size motor control

0.1~0.4kW 1Phase 200~230Volts
0.1~0.4kW 3Phase 200~230Volts



LS Industrial Systems Co., Ltd.

HEAD OFFICE

Yonsei Jaedan Severance Bldg., 84-11, 5ga, Namdaemunno,
Jung-gu, Seoul, 100-753, Korea

Tel. (82-2)2034-4643~4649

Fax. (82-2)2034-4879, 4885

<http://www.lsis.biz>

Global Network

- LS Industrial Systems (Middle East) FZE Dubai, U.A.E.
Address: P.O.Box-114216, API World Tower, 303B, Sheikh Zayed Road, Dubai, U.A.E.
Tel: 971-4-332-8289 Fax: 971-4-332-9444 e-mail: hwyim@lsis.biz
- Dalian LS Industrial Systems Co., Ltd. Dalian, China
Address: No.15, Liaohexi 3-Road, Economic and Technical Development zone, Dalian 116600, China
Tel: 86-411-8273-7777 Fax: 86-411-8730-7560 e-mail: lixk@lsis.com.cn
- LS Industrial Systems (Wuxi) Co., Ltd. Wuxi, China
Address: 102-A, National High & New Tech Industrial Development Area, Wuxi, Jiangsu, 214028, P.R.China
Tel: 86-510-8534-6666 Fax: 86-510-522-4078 e-mail: xuhg@lsis.com.cn
- LS-VINA Industrial Systems Co., Ltd. Hanoi, Vietnam
Address: Nguyen Khe - Dong Anh - Ha Noi - Viet Nam
Tel: 84-4-882-0222 Fax: 84-4-882-0220 e-mail: sijo@hn.vnn.vn
- LS Industrial Systems Tokyo Office Tokyo, Japan
Address: 16FL, Higashi-Kan, Akasaka Twin Tower 17-22, 2-chome, Akasaka, Minato-ku Tokyo 107-8470, Japan
Tel: 81-3-3582-9128 Fax: 81-3-3582-2667 e-mail: jschuna@lsis.biz
- LS Industrial Systems Shanghai Office Shanghai, China
Address: Room E-G, 12th Floor Huamin Empire Plaza, No.726, West Yan'an Road Shanghai 200050, P.R. China
Tel: 86-21-5237-9977 (609) Fax: 89-21-5237-7191 e-mail: jinhk@lsis.com.cn
- LS Industrial Systems Beijing Office Beijing, China
Address: B-Tower 17FL Beijing Global Trade Center B/D. No.36, BeiSanHuanDong-Lu, DongCheng-District,
Beijing 100013, P.R. China
Tel: 86-10-5825-6025,7 Fax: 86-10-5825-6026 e-mail: cuixiaorong@lsis.com.cn
- LS Industrial Systems Guangzhou Office Guangzhou, China
Address: Room 1403,14F, New Poly Tower, 2 Zhongshan Liu Road, Guangzhou, P.R. China
Tel: 86-20-8326-6764 Fax: 86-20-8326-6287 e-mail: linsz@lsis.biz
- LS Industrial Systems Chengdu Office Chengdu, China
Address: 12Floor, Guodong Building, No52 Jindun Road Chengdu, 610041, P.R. China
Tel: 86-28-8612-9151 Fax: 86-28-8612-9236 e-mail: yangcf@lsis.com.cn
- LS Industrial Systems Qingdao Office Qingdao, China
Address: 7B40, Haixin Guangchang Shenye Building B, No.9, Shandong Road Qingdao 26600, P.R. China
Tel: 86-532-8501-6568 Fax: 86-532-583-3793 e-mail: liirj@lsis.com.cn

Specifications in this catalog are subject to change without notice due to continuous product development and improvement.

INDUSTRIAL AUTOMATION

www.lsis.biz

Automation Equipment



LS Industrial Systems
www.lsis.biz

Experience the power!

Slim and Power...

We have created the Micro class drive to provide the optimal solution for small size motor controls.

You will be experiencing amazing power with this slim size.



- 04 Key features of product
- 06 Model and Specifications
- 07 Standard Specification
- 08 Wiring
- 09 Terminal and loader functions
- 10 Shifts between each code and group

- 12 Function code table
- 18 Protections
- 19 Check & Remedy
- 20 Peripheral device Specifications
- 21 Dimension

Hotline: 1900.6536 - Website: HOPLONGTECH.COM


CE UL ISO9001 ISO14000

STARVERT **iE5**



Small but variety!


Our iE5 is best fit for small machineries
such as packing machines, small conveyers, treadmills and etc...

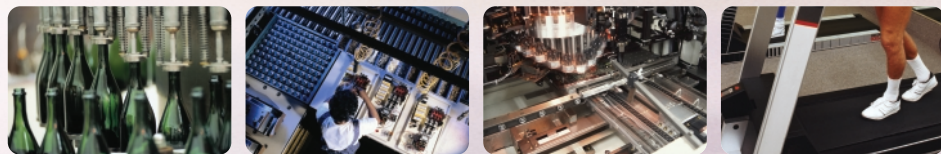

INDUSTRIAL AUTOMATION

Smaller micro size

Our iE5 realizes 5% smaller micro size comparing to previous product.

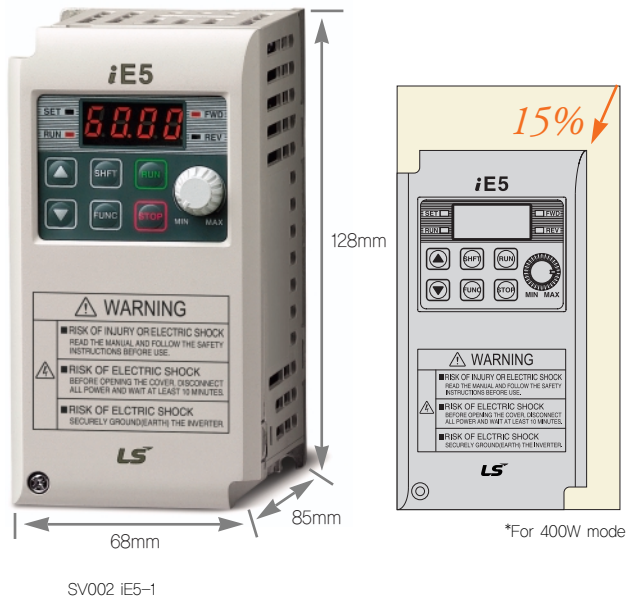


Easy operation and control

The operation became easy by adopting the 6 keys and volume resistor types on the loader. Besides, convenience is guaranteed by limiting the total number of parameters as 100 parameters.




PI Control

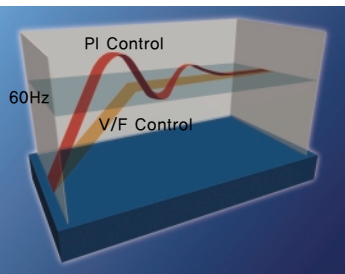


The PI Control is used to control the oil level, temperature and pressure of plant and process. This drive speed control function compares between drive setting value and signal values gauged from sensors and actual control is made through Proportion and Integral.

PNP, NPN dual control Signal

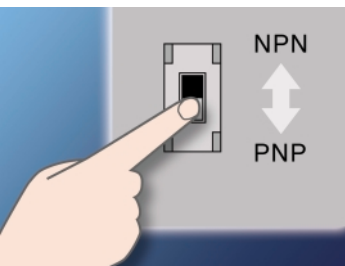

iE5 provides both PNP and NPN minor signal powers so that no matter what signal type the external controller adopts, +24V power can be applied.

Modbus communication interface (optional)

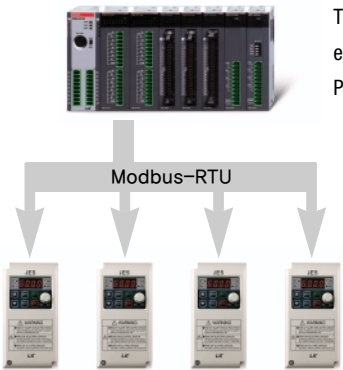

The optional modbus communication enables controlling drives through PLC and other controlling devices.

Parameter copy function (Under development)



The parameters inputted to a drive can be duplicated and copied to other drives by this parameter copy unit.

Model and Specifications

Motor	220V(Single phase)	220V(3 phase)
0.1kW(1/8HP)	SV001 iE5-1	SV001 iE5-2
0.2kW(1/4HP)	SV002 iE5-1	SV002 iE5-2
0.4kW(0.5HP)	SV004 iE5-1	SV004 iE5-2

C : RS-485 communication is available as option
 – : RS-485 communication is not available


Input voltage 1 : Single 220V class
 2 : 3Phase 220V class

SV 004 iE5 1 C

LS Inverter Starvert series

Maximum motor capacity(kW)
 (001 : 0.1kW ~ 004 : 0.4kW)

LS Inverter series name

SV004iE5-1			Inverter model
INPUT	200 ~ 230V 5.5A	1phase 50/60Hz	Input voltage specification
OUTPUT	0 ~ INPUT V 2.5A 0.5HP/0.4kW (D)	3phase 0.1~200Hz	Output voltage, Rated output current, Frequency, Inverter capacity
 0010222100155			Barcode and serial number
LS Industrial Systems Co., Ltd. Made in Korea			

Standard Specification

Basic specification

Model : SV□□□ iE5-□			001-1	002-1	004-1	001-2	002-2	004-2
Applicable motor		[HP]	1/8	1/4	1/2	1/8	1/4	1/2
		[kW]	0.1	0.2	0.4	0.1	0.2	0.4
Rated output	Rated capacity [kVA]		0.3	0.6	0.95	0.3	0.6	1.14
	Rated current [A]		0.8	1.4	2.5	0.8	1.6	3.0
	Output frequency [Hz]		0 ~ 200 [Hz]					
	Output voltage [V]		3 phase 200 ~ 230V					
Rated input	Applicable voltage [V]		1 phase 200 ~ 230 VAC (±10%)			3 phase 200 ~ 230 VAC (±10%)		
	Input frequency[Hz]		50 ~ 60 [Hz] (±5%)					
	Rated current [A]		2.0	3.5	5.5	1.2	2.0	3.5

Control

Control type	V/F Control
Frequency set resolution	Digital command : 0.01Hz Analog command : 0.06Hz (Max.frq : 60Hz)
Frequency accuracy	Digital command : 0.01% of Max. Output frequency Analog command : 0.1% of Max. Output frequency
V/F pattern	Linear, Squared, User V/F
Overload capacity	150% / 1Min
Torque boost	Manual / Auto torque boost

*Note1) The standard of rated capacity is 220V.

*Note2) The maximum output voltage does not increase over input voltage and the output voltage can be set below input voltage level.

Operation

Operation method		Operaton method can be selected between loader, termanai and communication operation
Frequency set		Analog method : 0~10(V), 0~20(mA), Loader volume Digital method : Loader
Operation function		PI Control, Up-Down , 3-wire operation
Input		NPN / PNP Selectable
	Multi-function terminal (5 points) P1,P2,P3, P4,P5	FWD/REV operation, Fault reset, Jog operation, Multi-step frequency(up/down), DC braking in stop mode, Frequency increase, Frequency decrease, 3 wire-operation external trip A and B, Shift to general operation from PI operation. Analogue command frequency set, Up/down save frequency delete
	Multi-function relay terminal	Fault and drive operation condition output (N.), N.C) AC250V below 0,3A and below DC 30V 1A
	Analogue output	0~10Vdc(below 10mA) :can be selected among frequency, current, voltage, DC voltage


Protection

Trip	Over voltage, Under voltage, Over current, Ground fault, Drive overload, Overload trip, Overheat, Condensor overload, Phase loss overload protection, Frequency command loss, Hardware fault
Alarm	Stall prevention
Momentary power loss	Below 15msec : Operation continued (should be within rated input voltage and rated output) Over 15msec : Auto re-ignition operation.

Guaranteed operation condition

Cooling	Open cooling
Enclosure	IP20 (open type)
Ambient temperature	-10℃~65℃
Protection temperature	-20℃ ~ 65℃
Humidity	Below 90% RH (non-condensation)
Altitude/vibration	Below 1000m, 5.9m/sec square (0.6G)
Installation condition	No corrosive gas, No flammable gas, No oil mist, No dust

Wiring

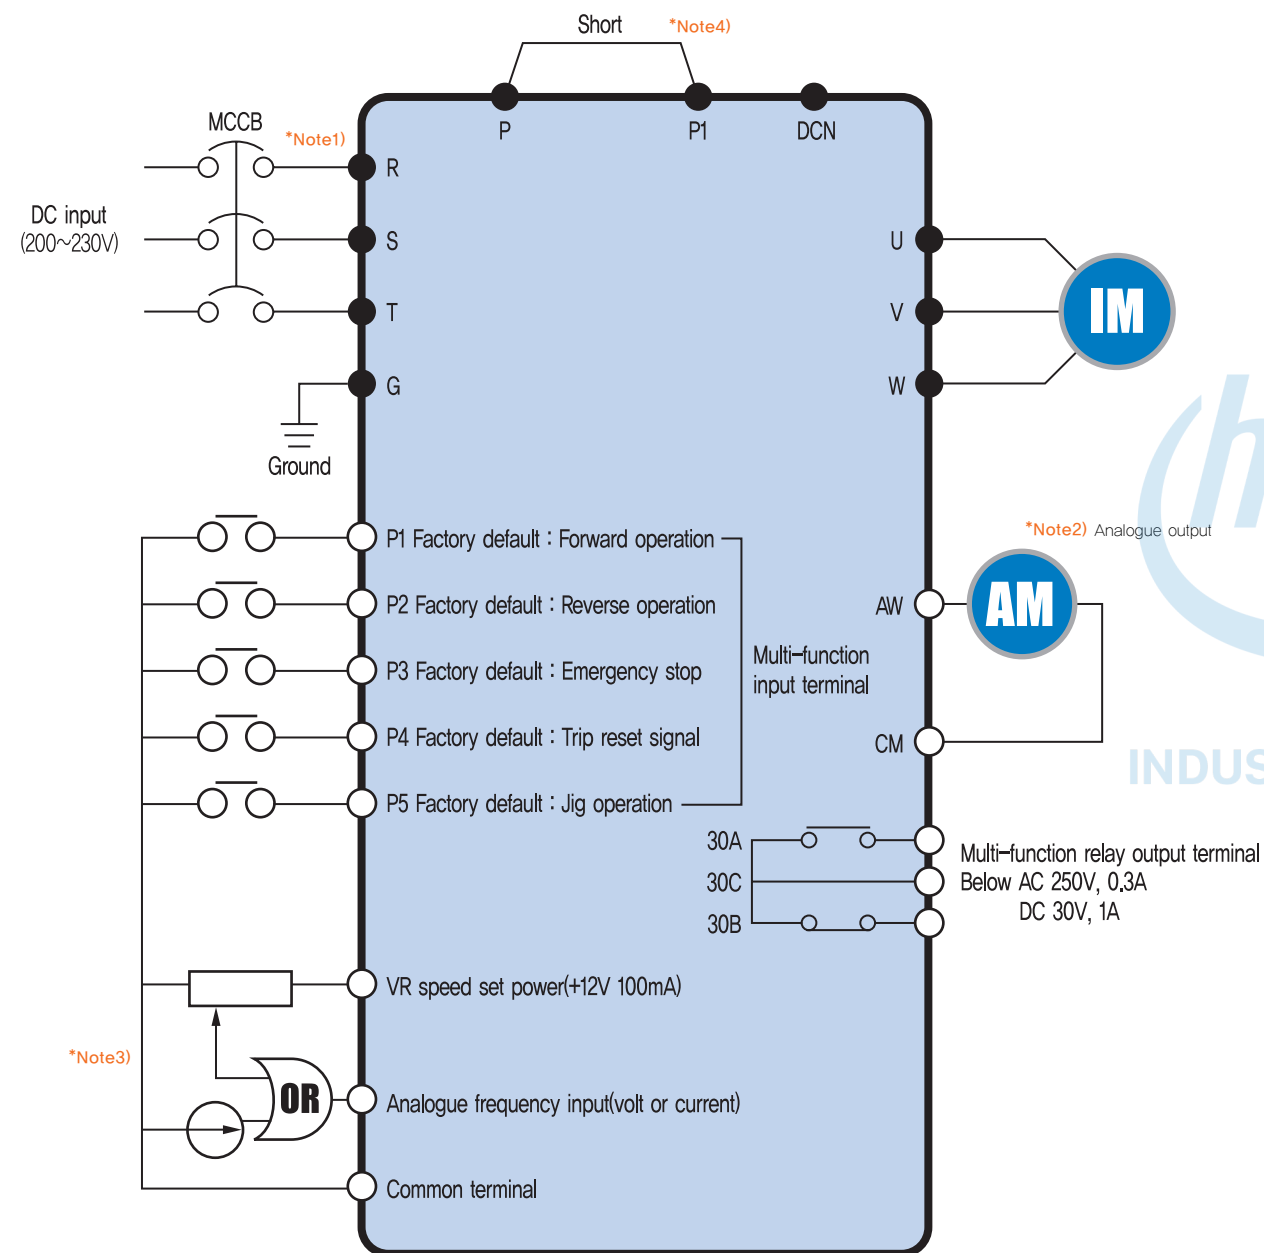

*Note1) "●" and "○" means the main circuit and the control circuit respectively.
Please connect to the R and S terminals in case of single phase use.

*Note2) The analogue output is from zero to 10V.

*Note3) The voltage current and loader volume is possible for the external speed command.

*Note4) The P and P1 terminals for DC reactor are connected as short circuit.

Terminal Function

R	S	T	P	P1	DCN	U	V	W
---	---	---	---	----	-----	---	---	---

	Terminal signal	Terminal name	Description
Main circuit	R, S, T	DC input	Connect 3 phase DC power
	U, V, W	Inverter output	Connect 3 phase induced motor
	P, P1	DC reactor connection	Connect DC reactor.
	G	Ground	Ground connection terminal

*Note) Please connect to the R and S terminals for single phase drive.

P1	P2	P3	P4	P5	VR	AI	AM	CM	30A	30B	30C
----	----	----	----	----	----	----	----	----	-----	-----	-----

Classification	Terminal signal	Terminal name	Description
Input signal	P1, P2, P3, P4, P5	Multifunction input terminal	Factory default vaule P1 (FX :forward operation) P2 (RX :Reverse operation) P3 (EST :Emergency stop) P4 (RST :Trip clear signal) P5 (JOG :Jog frequency operation)
	VR	Frequency set power	Analog frequency set power. Max. output is +12V 100mA.
	AI	Frequency set(Volt/Current)	DC 0~10V and DC 4~20mA can be set as basic frequency.
	CM	Frequency set common terminal	Analog frequency set signal and AM common terminal.
Output signal	AM-CM	Display	Among output frequency, output current and output voltage, one item can be selected as output. Factory set is output frequency. Max output voltage is 0~10V. (Below 10mA)
	30A, 30C, 30B	Multifunctional relay	Inverter protection fuction is activated as blocking the output and releaseing multifunction signal, AC 250V below 0.3A and below DC 30V 1A.

Loader Function




Classification	Display	Function	Fuction description
LED	FWD	Forward	Light is on with forward operation.
	REV	Reverse	Light is on with reverse operation.
	SET	On setting	Light is on when parameter is being set.
	RUN	On operation	Light is off when the inverter is on Acc/Dcc and on with normal speed operation.
KEY	▲	Up key	For code shift or increasing parameter set value.
	▼	Down key	For code shift or decreasing parameter set value.
	RUN	Operation key	For inverter operation
	STOP	Stop/Reset	Stop command key during operation and also used as fault clear key.
	FUNC	Function key	Used for chaning paramter set vaule and saving its value
	SHFT	Shif key	Shift between groups and paramter setting or moving digit number to the left.
	Volume resistor		For chaning operation frequency.
	NPN/PNP selection switch		Turning to either NPN or PNP mode.
	Current/Voltage selection switch		Swich for transforming the analog switch inputs into current or voltgae.

Shifts between each code and group

Shifts between each code and group


■ Diagram of function code shift method

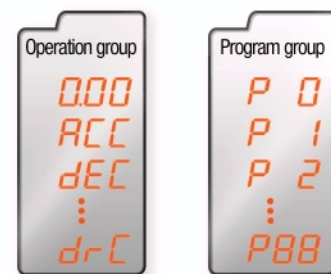

The parameter group of iE5 consists of below two groups


Group name	Content
Operation group	Basic parameters for operation such as the Target frequency, Acc/Dec time and etc.
Program group	Additional function set parameter

- Shifts between groups can be enabled pressing the shift key at the zero code of the operation and program groups.

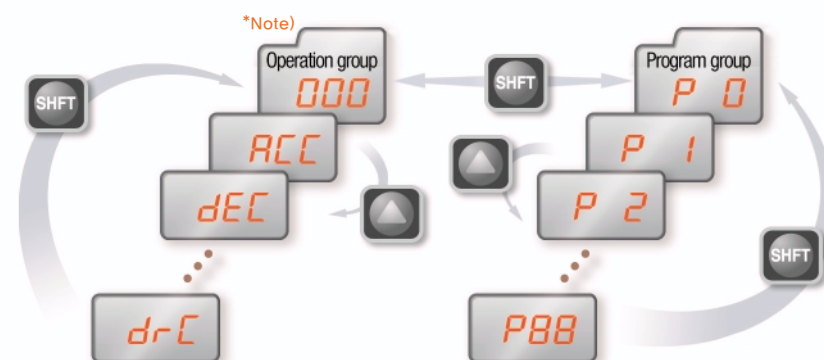


*Note) The target frequency can be set at the first group of operation group so that the factory default value has been set as 0.0 yet in cas of frequency change, the changed frequency is displayed.

- If a user presses the shift key out of number 0, the activating parameter shifts to 0 and if the user presses once more the shift key can be shifted between groups.

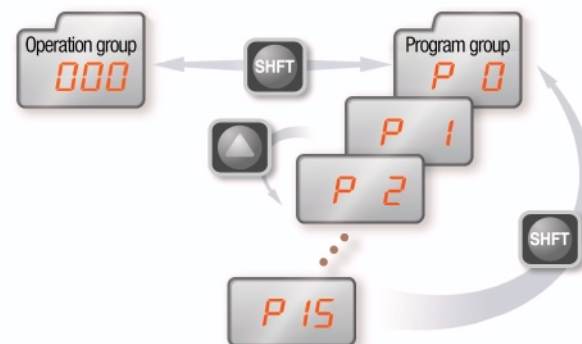

■ Operation group code shifts

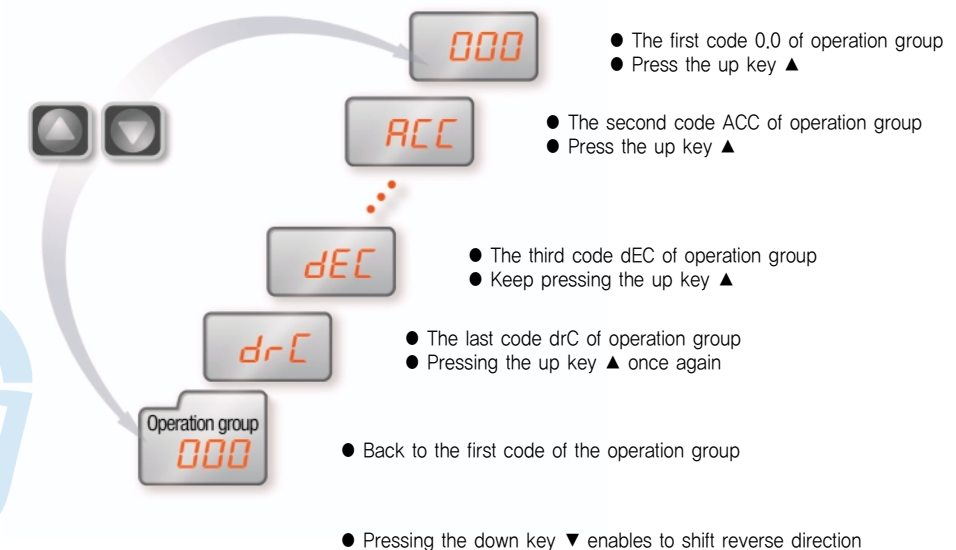

■ Setting the operation group frequency to 30.05Hz (Keypad operation)



- Displays the first code information of the operation group
Press the function key (FUNC)
- The setting light is off
The second decimal point number can be changed
Keep pressing the up key ▲ till the number reaches to 5
- Press the shift key
The set number position shifts to left
- The set number position shifts to left
Press twice the shift key
- The third last digit is changed as 0
Set as 3 by pressing the up key ▲
- Press the function key (FUNC)
- Left displayed 30.05 blinks and asks if it has to be saved
Press the function key (FUNC)
- The setting light (SET) is off
Saved target frequency is displayed after stopping the light blink
The saved data parameter is cancelled by pressing the Shift key (SHIFT), up key ▲ and then the down key ▼

*Note) The saved paramete can be cancelled by pressing all keys except the function key (FUNC).

Function code table

■ Operation group

Display	Function	Setting range	Description	Factory default	Mode change during run
0.0	Command frequency	0 ~ 200 [Hz]	Operation frequency set. Displays the command frequency during stop mode and displays the output frequency during run. In case of multi-speed operation, the frequency will be zero speed. The frequency setting can not be set over the maximum frequency(P16).	0.0	○
ACC	Acceleration time	0 ~ 6000 [sec]	Zero times acc/dec time in case of multi-step speed acc/dec.	5.0	○
dEC	Acceleration time			10.0	○
drv	Operation command method	0 ~ 3	0 Operation using the RUN key and the STOP key of loader	1	×
			1 Terminal operation FX : Forward operation command RX : Reverse operation command		
			2 FX : Operation and Stop command RX : Selecting reverse		
			3 Communication operation: Operation by communication		
Frq	Frequency setting method	0 ~ 4	0 Digital Loader digital frequency setting 1	0	×
			1 Loader digital frequency setting 2		
			2 Terminal AI input		
			3 Analog Loader volume resistor		
			4 Communication option		
St1	Multi step frequency 1	0 ~ 200 [Hz]	Speed 1 frequency set in case of multi step operation	10.0	○
St2	Multi step frequency 2		Speed 2 frequency set in case of multi step operation	20.0	○
St3	Multi step frequency 3		Speed 3 frequency set in case of multi step operation	30.0	○
CUr	Output current	—	Output current display	—	—
rPM	No of times of motor spin	—	Displaying no of time of motor spin(RPM)	—	—
dCL	Inverter DC voltage	—	Displaying the DC link voltage of inverter inside	—	—
vOL	Output voltage	—	Displaying output voltage	vOL	—
nOn	Fault status	—	Displaying the trip type, frequency, current and operation condition of trip	—	—
drC	Spin direction selection	F, r	Setting the operation command method as 0	P	○
			F Forward operation		
			r Reverse operation		

■ Program group

Display	Function	Setting range	Description	Factory default	Mode change during run
P0	Jump code	0 ~ 88	Shifting code number set	1	○
P1	Fault history 1	—	Fault type and frequency, current, acc/dec and stop condition of fault. The latest fault is saved as fault history no 1.	nOn	—
P2	Fault history 2	—		nOn	—
P3	Fault history 3	—		nOn	—
P4	Fault history delete	0 ~ 1	Deleting the fault history P1~P3	0	○
P5	Forward/Reverse not allowed	0 ~ 2	0 Forward/Reverse spinning is possible	0	×
			1 Forward spinning not allowed		
			2 Reverse spinning not allowed		
P6	Acceleration pattern	0 ~ 1	0 Liner pattern operation	0	×
P7	Deceleration pattern		1 S shape pattern operation		
P8	Stop mode selection	0 ~ 2	0 Deceleration stop	0	×
			1 DC braking stop		
			2 Free run stop		
P9	DC braking frequency	0.1 ~ 60 [Hz]	DC braking start frequency. DC braking frequency can not be set below the starting frequency P18.	5.0	×

*Note1)

Function code table

■ Program group

Display	Function	Setting range	Description	Factory default	Mode change during run
P10	Output block time before DC braking	0 ~ 60 [sec]	Output is blocked for set up time and starts DC braking.	0.1	×
P11	DC braking volume	0 ~ 200 [%]	DC current size that flows to motor. The standard is motor rated current (P43).	50	×
P12	DC braking time	0 ~ 60 [sec]	DC time that flows to motor.	1.0	×
P13	DC braking volume at ignition	0 ~ 200 [%]	DC current volume that flows to motor before it spins. Motor rated current (P43).	50	×
P14	DC braking time of ignition	0 ~ 60 [sec]	DC current flows to motor for scheduled time at ignition.	0	×
P15	Jog frequency	0 ~ 200 [Hz]	Jog operation frequency can be set. The frequency can not be set over maximum frequency(P16).	10.0	○
P16	Maximum frequency	40 ~ 200 [Hz]	Frequency setting related maximum value of parameters. The standard frequency of Acc/Dec lean. Note : Once the maximum frequency value is changed, all parameter values other than P17(standard frequency) are changed as the maximum frequencies that are all over the maximum frequencies.	60.0	×
P17	Standard frequency	30 ~ 200 [Hz]	The output frequency within which the inverter output equals to the rated voltage of moto.	60.0	×
P18	Starting frequency	0.1 ~ 10 [Hz]	The minimum parameter value of frequency level.	0.5	×
P19	Torque boost selection	0 ~ 1	0 Manual torque boost	0	×
			1 Automatic torque boost		
P20	Forward operation torque boost	0 ~ 15 [%]	The boost volume, in case of forward operation, that flows to motor. In case of maximum output voltage.	5	×
P21	Reverse operation torque boost	0 ~ 15 [%]	The boost volume, in case of reverse operation, that flows to motor. The maximum output voltage is standard.	5	×
P22	V/F pattern	0 ~ 1	0 Liner	0	×
			1 Square		
P23	Output voltage control	40 ~ 110 [%]	Output voltage size control. The input volatge is standard.	100	×
P24	Overload trip selection	0 ~ 1	Blocking the inverter output in case of overload. The overload protection function is activated if user sets as umber 1.	1	○
P25	Overload trip level	50 ~ 200 [%]	Overload current size setting. Motor rated current (P43) is standard.	180	○
P26	Overload trip time	0 ~ 60 [sec]	Inverter blocks outpput if the overload trip level(P25) current flows for the overload trip time.	60	○
P27	Stall prevention selection	0 ~ 7	Decelerating in acceleration or normal operation. Deceleration is stopped during deceleration operation.	0	×
			Stall prevention during deceleration		
			Stall prevention during normal deceleration		
			Stall prevention during acceleration deceleration		
			bit 2 bit 1 bit 0		
			0 — — —		
			1 — — v		
			2 — v —		
			3 — v v		
P28	Stall prevention level	30 ~ 150 [%]	Displaying the stall prevention current size during acceleration or normal operation in terms of percent(%). The motor rated current(P43) is standard.	150	×
P29	Up/Down frequency save selection	0 ~ 1	Selecting the set frequency for up/down operation. If user chooses number 1, it is saved onto up/down frequency(P30).	0	×
P30	Up/Down frequency save	—	Displaying up/down operation stop or before acceleration frequency.	0.00	—
P31	Dwell frequency	0.1 ~ 200 [Hz]	Once operation command is inputted, first outputs the dwell frequency during dwell time(P32) and then starts acceleration. Dwell value can be set between the maximum frequency P16 and starting frequency P18.	5.0	×
P32	Dwell time	0~10 [sec]	Dwell operation time setting	0.0	×

*Note1) The P8 has to be set as 1 (DC braking stop)

Function code table

■ Program group

Display	Function	Setting range	Description	Factory default	Mode change during run
P33	User selection fault detect	0 ~ 7 [bit]	Setting the fault detect item as per user selection. The input/output phase loss, ground detect during run can be selected.	0	○
			User selection fault detect [Trip]		
			Ground detect during run GcT		
			Input phase loss detect CoL		
			Output phase loss detect(Pot)		
			bit 2		
			bit 1		
			bit 0		
			0		
P34	Selecting start with power input	0 ~ 1	P34 is only used in case the operation command method is selected. Either terminal number 1 or 2. Acceleration is getting started when the FX or RX terminla is on with power input.	0	×
P35	Selecting start after trip	0 ~ 1	P34 is only used in case the operation command method is selected either terminal number 1 or 2. In the condition that the FX and RX terminals are on, after trip, resetting starts acceleration.	0	○
P36	Speed search selection	0 ~ 15 [bit]	While motor is on spinning, this function prevents the probable faults.	0	○
			Starting with power input(P34)		
			Restart after instant power failure		
			Operation after trip (P35)		
			General Acceleration		
			bit 3		
			bit 2		
			bit 1		
			bit 0		
			0		
			1		
			2		
			3		
			4		
			5		
			6		
			7		
			8		
			9		
			10		
			11		
			12		
			13		
			14		
			15		
P37	Speed search current level	80 ~ 200 [%]	The current size during peed search operation is limited. Motor rated current(P43) is standard.	100	○
P38	Number of times of Auto-restart	0 ~ 10	Setting number of times that drive can operate automatically after trip. If trips exceed the set times, drive does not restart automatically. Only use when the operation command method(drv) of operation group is selected either terminal umber 1 or 2 and the operation command is inputted. However, the Auto-restart does not work in case the protective functions such as OHT, LVT, EST and HWT are in active.	0	○
P39	Auto re-start stand by time after trip	0 ~ 60 [sec]	Re-start is operated after the auto re-start stand-by time of trip.	1.0	○
P40	Motor capacity selection	0.1 ~ 0.4		~*Note2)	×
P41	Number of poles of motor	2 ~ 12	Used for number of spinning times of motor of the operation group.	4	×

*Note2) The initial vlaue of P40 is set for the drive capacity.

Function code table

■ Program group

Display	Function	Setting range	Description	Factory default	Mode change during run
P42	Motor rating Sleep frequency	0 ~ 10 [Hz]	The difference value between input power frequency and motor name plate displayed rated spin times(rpm) is inputted.	~*Note3)	×
P43	Motor rated current	0.0 ~ 25.5 [A]	The printed rated current value of name plate is inputted.	–	×
P44	Non-load current of motor	0.0 ~ 25.5 [A]	After taking out load from motor, the current vaule which was measured in operation condition of rated spin times is inputted.	–	×
P45	Carreir frequency selection	1 ~ 10 [kHz]	As the set carrier value is larger the noise is smaller but the leaking current is bigger.	3	○
P46	Control type selection	0 ~ 2	0 V/F control	0	×
			1 Sleep compensation control		
			2 PI control		
P47	PI control P gain	0 ~ 999.9 [%]	Gain setting for PI control response.	300.0	○
P48	PI control I time	0.1~32.0 [sec]		1.0	○
P50	PI control F gain	0 ~ 99.99 [%]	Feed forward of PI control	0.0	○
P51	PI frequency highest limit	0.1 ~ 200 [Hz]	Limits the frequency size that comes from PI calculation.	60.0	○
P52	PI frequency lowest limit	0.1 ~ 200 [Hz]	The setting value can be between the maximum frequency(P16) and starting frequency(18).	5.0	○
P53	Power input display selection	0 ~ 15	First displayed items on the loader with power input.	0	○
			0 Operation frequency		
			1 Acceleration time		
			2 Deceleration time		
			3 Operation command method		
			4 Frequency command method		
			5 Multi-step frequency 1		
			6 Multi-step frequency 2		
			7 Multi-step frequency 3		
			8 Outout current (Cur)		
			9 Number of times of motor spin(rpm)		
			10 Drive DC voltage (DCL)		
			11 User selection (vOL)		
			12 Fault status 1		
			13 Operation direction selection		
			14 Output current display		
			15 Displaying number of times of motor spin		
P54	Gain of number of times of motor	1 ~ 1000 [%]	By claculating the gear rate of load system, displays the number of times of motor. Monitoring is possible at the (rPM) code.	100	○
P55	Constant number of AI filter input	0 ~ 9999	Contorlling the analog input response.	10	○
P56	Minimum input of AI	0 ~ 100 [%]	Minimum analog input value can be set as % of total input.	0	○
P57	AI input maximum voltage matching	0 ~ 200	Anlog input minimum case frequency.	0.0	○
P58	AI maximum input	0 ~ 100 [%]	The maximum analog input value can be set as all input percent(%).	100	○
P59	AI input maximum voltage matching frequency	0 ~ 200 [Hz]	The maximum frequency value of analog input.	60.0	○
P60	Volume input filter constant	0 ~ 9999	Response speed control of volume input operation.	10	○
P61	Volume input minimum value	0 ~ 100 [%]	The volume input minimum spin value can be set as all input percent(%).	0	○
P62	Volume input maximum voltage matching frequency	0 ~ 200 [Hz]	Volume input mainimu value frequency.	0.0	○
P63	Volume input maximum value	0 ~ 100 [%]	The volume input maximum value can be set as all iput percent(%).	100	○
P64	Volume input maximum voltage matching frequency	0 ~ 200 [Hz]	The volume input maximum value frequency.	60.0	○
P65	Phase loss standard selection of analog speed command	0 ~ 2	0 No operation	0	○
			1 Operaton below half value of set		
			2 Operation below set value		

*Note3) All the values from P42 and P44 are modified to adopt the motor capacity P40.



Function code table

■ Program group


Display	Function	Setting range	Description					Factory default	Mode change during run	
P66	Multi-function input terminal P1 function	0 ~ 24	0	Forward operation command(FX)					0	○
			1	Reverse operation command(RX)						
P67	Multi-function input terminal P2 function		2	Emergency stop(EST-Emergency stop trip) : Temporal output block.					1	○
P68	Multi-function input terminal P3 function		3	Fault reset (RST)					2	○
			4	Jog operation command (JOG)						
P69	Multi-function input terminal P4 function		5	Multi-step frequency-up					3	○
			6	Multi-step frequency-down						
P70	Multi-function input terminal P5 functions		7	-					4	○
			8	-						
			9	-						
			10	-						
			11	DC braking command						
			12	-						
			13	-						
			14	-						
			15	Up-down operation function	Frequency up					
			Frequency down							
			16	3-wire operation.						
			17	External trip signal input : A contact (EIA)						
			18	External signal input : B contact (EIB)						
			19	Changing operation mode from PI to normal operation.						
			20	Changing operation mode from option operation to master operation.						
			21	Analog command frequency fix						
			22	Acc/Dec stop command						
			23	Up/Down frequency delete						
		P71	Input terminal status display		BIT4	BIT3	BIT2	BIT1		
			P5	P4	P3	P2	P1			
P72	Multi-function input filter constant	1 ~ 20	Bigger setting value results in slower response speed.					15	○	
P73	Analog output item selection	0 ~ 3		Output item		Matching output 10[V]			0	○
			0	Output frequency		Maximum frequency				
			1	Output current		150%				
			2	Output voltage		282V				
			3	Drive DC voltage		DC 400V				
P74	Analog output level control	10 ~ 200 [%]	10V is standard					100	○	
P75	Detected frequency	0 ~ 200 [Hz]	Please use when the output terminal function of relay output(P77) is chosen from 0~4.					30.0	○	
P76	Detectable frequency range		No more than the maximum frequency(P16) can be set.					10.0	○	
P77	Multifunctional relay terminal function selection	0 ~ 17	0	FDT-1					17	○
			1	FDT-2						
			2	FDT-3						
			3	FDT-4						
			4	FDT-5						
			5	Overload (OL)						
			6	Drive overload (IOLt)						
			7	Motor stall (STALL)						
			8	Overvoltage fault (OVt)						
			9	Lowvoltage fault (LVt)						
			10	Cooling pin overheat (OHT)						
			11	Command loss						
			12	On operation						
			13	On stop						
			14	On normal operation						
			15	Speed search function is on						
			16	Operation command is ready						
			17	Fault output selection						

Function code table


■ Program group

Display	Function	Setting range	Description				Factory default	Mode change during run	
P78	Fault output selection	0 ~ 7 [bit]		After trip, when the number of Auto restart is set, P38 is activated	Except low voltage trip, in all other cases this function is activated	This function is activated with low voltage trip	2	O	
				bit 2	bit 1	bit 0			
			0	—	—	—			
			1	—	—	v			
			2	—	v	—			
			3	—	v	v			
			4	v	—	—			
			5	v	—	v			
			6	v	v	—			
7	v	v	v						
P79	Drive channel	1 ~ 250	Use with communication option				1	O	
P80	Communication speed	0 ~ 2	Communication speed set				2	O	
			0	2400 [bps]					
			1	4800 [bps]					
			2	9600 [bps]					
P81	Operation type selection when the speed command is lost	0 ~ 2	This function is used when the analog signal of terminal (Volume or AI) or communication are operated by frequency command.				0	O	
			0	Operating before command loss frequency					
			1	Free run stop(Blocking output)					
			2	Deceleration stop					
P82	Speed command loss determination time	0.1 ~ 120 [sec]	If the frequency command is not inputted during speed command loss determination time the drive is operated by P81 selected operation way.				1.0	—	
P83	Communication stand-by time	2 ~ 100 [ms]	In case of RS 485 communication, setting the stand-by time to the next TX output after TX signal.				5		
P84	Parity/STOP setting	0 ~ 3	Communication parity and STOP bit are set like following.				0		
				Parity bit		Stop bit			
			0	—		1 Stop bit			
			1	—		2 Stop bit			
			2	Odd Parity		1 Stop bit			
			3	Even Parity		1 Stop bit			
P85	Parameter Initializing	0 ~ 3	User modified parameters can be initialized as factory default values.				0	x	
			0	—					
			1	2 Groups' parameters initialization					
			2	Operation groups' parameters initialization					
			3	Program group parameters initialization					
P86	Password registration	0 ~ FFFF	Password inputted to prohibit the parameter change and values are set as HEXA.				0	O	
P87	Parameter change prohibition	0 ~ FFFF	The parameter change prohibition can be executed or cleared by the password.				0	O	
			UL(Unlock)		Parameter change is allowed				
			L(Lock)		Parameter change is prohibited				
P88	Version of Software	—	Displays the SW version of drive. Please refer to the manual version.				—	x	

Protections

Display	Protections	Descriptions
OCt	Over current	Drive output is blocked in case the output current is over 200% of rated current.
GfE	Ground current	In case the ground protection of starting point is used, the drive output is blocked if ground current flows that is generated from the drive output side.
GCt	Ground current	Drive blocks its output if the over current is flowed to any phase of between U.V.W phase. In this case the over current is generally generated by unbalancing from ground fault.
IOl	Overload	If the output current of drive is over 150% of rated current for more than one minute, the output is blocked. The protection time is shortened as output current is increased.
OLt	Overload trip	If output current is bigger than motor rated current(P25) the output is blocked.
OHt	Cooling fan overheat	If the drive cooling fan is overheated, and if the ambient temperature of drive reaches to over recommended degree, the output of drive is blocked.
COL	Condenser overload	This fault is generated in case of single phase loss of three phase product or if DC voltage fluctuation level becomes big as the main condenser is aged. Yet the condenser overload detection time can be varied depend on the output current size.
POt	Output loss	More than one phase becomes loss among U.V.W, the drive output is blocked.
OVt	Over voltage	If the main circuit DC voltage of drive inside goes over 400V, the output is blocked. This over voltage is generated if the deceleration time is too short or the input voltage goes over recommended level.
LVt	Low voltage	If drive inside main circuit voltage goes below 180V, drive blocks its output.
EEP	Parameter save fault	When the changed parameter is inputted to drive, if some faults are generated, this fault is displayed. This is displayed with power input.
HtE	Hardware fault	This is displayed with CPU or OS fault. This is not cleared by the STOP/RST key of loader or by the reset terminal. Fault is not cleared by STOP/RST keys of the keypad or reset terminal. Please re-input power after off the drive power and the keypad display power is completely off.
Est	Output instant blocking	Drive output is blocked when the EST terminal is on.  Caution : with the "ON" of terminal operation command signal FX or RX, if the EST terminal is off drive restart its operation.
EtA	A Contact fault signal input	Once the multi-function input terminal selection(P66~P70) is selected as number 1 8(External trip signal input :A contact) and if this selected becomes "OFF" the drive blocks output.
EtB	B Contact fault signal input	Once the multi-function input terminal selection(P66~P70) is selected as number 1 9(External trip signal input :B contact) and if this selected becomes "OFF" the drive blocks output.
---L	Frequency phase loss	Displays fault status of frequency command. In case the analog input(0~10V), 0~20mA and option(RS485)operation, if the operational signal is not inputted, the operation is carried out by P81 that is selected from the speed command phase loss operation.

Check and Remedy

Protections	Fault reason	Remedy
 Caution The fault caused by over current may damage drive inside power semiconductor parts so that the reason of over current has to be cleared first and then start operation.		
OCt Over current	<ul style="list-style-type: none"> Acc/Dec time is too fast comparing to the load inertia(GD2). Load is bigger than rated value. Drive output is released during free run of motor. Output terminal and ground fault. Motor breaking is too speedy. 	<ul style="list-style-type: none"> Please set the Acc/Dec time with higher margin. Please replace bigger capacity drive. Try to operate after stopping motor or please use the speed search function(H22) of function group 2. Please check the output wiring. Please check the mechanical break.
GfE GCt Ground current	<ul style="list-style-type: none"> Drive output cable is on ground fault. Motor insulation is heated. 	<ul style="list-style-type: none"> Please check the output terminal wiring. Please replace the motor.
IOl OLt Drive overload Overload trip	<ul style="list-style-type: none"> Load is bigger than rated value. Torque boost volume is too big. 	<ul style="list-style-type: none"> Please use higher capacity motor and drive. Please reduce the torque boost volume.
OHt Cooling fan overheat	<ul style="list-style-type: none"> Cooling system fault. Cooling fan lifetime is over. High ambient temperature. 	<ul style="list-style-type: none"> Please check the vents. Please replace cooling fan. Please keep the ambient temperature to 40°C.
COL Condenser overload	<ul style="list-style-type: none"> 1 phase is loss of three phase product. Internal condenser life is over. 	<ul style="list-style-type: none"> Please check input power wiring. Please check the input power. Replacement may need please ask after sales service.
POt Output phase loss	<ul style="list-style-type: none"> Electronic contactor fault of output part. Output wiring fault. 	<ul style="list-style-type: none"> Please check the electronic contactor of output part. Please check the output part wiring.
OVt Over voltage	<ul style="list-style-type: none"> Dec time is too short comparing to the load inertia(GD2). Regenerative load is located at the output part. Main power is too high. 	<ul style="list-style-type: none"> Please set the deceleration time with higher margin. Please down the main power below rated value.
LVt Low voltage	<ul style="list-style-type: none"> Main power is too low. Bigger than power capacity load is connected to the main power part. Electronic contactor fault of power part. 	<ul style="list-style-type: none"> Please use over rated value power. Please use higher power. Please replace the electronic contactor.
EtA EtB A contact fault signal input B contact fault signal input	<ul style="list-style-type: none"> When the multi-function input terminal selection of the program group(P66~P70) is set as number 18 or 19 if these terminals are "ON" these fault messages are displayed. 	<ul style="list-style-type: none"> Circuit fault and external faults.
---L Frequency command loss	<ul style="list-style-type: none"> No command at the V1 and I terminals. No signal input of communication option. 	<ul style="list-style-type: none"> Please check the wiring and command level of V1 and I terminals. Please check the communication cable of the master device.
EEP Parameter save fault	HtE Hardware fault	<ul style="list-style-type: none"> After software upgrade when the power is inputted as first time, these messages are displayed. In this case, please "OFF" the power first and then re-input the power. This is normal operation after software upgrade.

Peripheral device specifications


■ MCCB and MC standards

Drive capacity	MCCB(LSIS)		ELCB(LSIS)		MC(LSIS)	
001 iE5-1	ABS33b	5A	EBS33b	5A	GMC-9	7A
002 iE5-1		10A		10A	GMC-12	9A
004 iE5-1		15A		15A	GMC-18	13A
001 iE5-2		3A		3A	GMC-9	7A
002 iE5-2		5A		5A	GMC-9	7A
004 iE5-2		10A		10A	GMC-12	9A

■ Reactor specification

Drive capacity	AC input fuse	AC reactor	DC reactor
001 iE5-1	5A	4.2mH, 3.5A	10mH, 3A
002 iE5-1	5A	4.2mH, 3.5A	10mH, 3A
004 iE5-1	10A	5.1mH, 5.4A	7mH, 5A
001 iE5-2	5A	4.2mH, 3.5A	10mH, 3A
002 iE5-2	5A	4.2mH, 3.5A	10mH, 3A
004 iE5-2	5A	4.2mH, 3.5A	7mH, 5A

Dimension

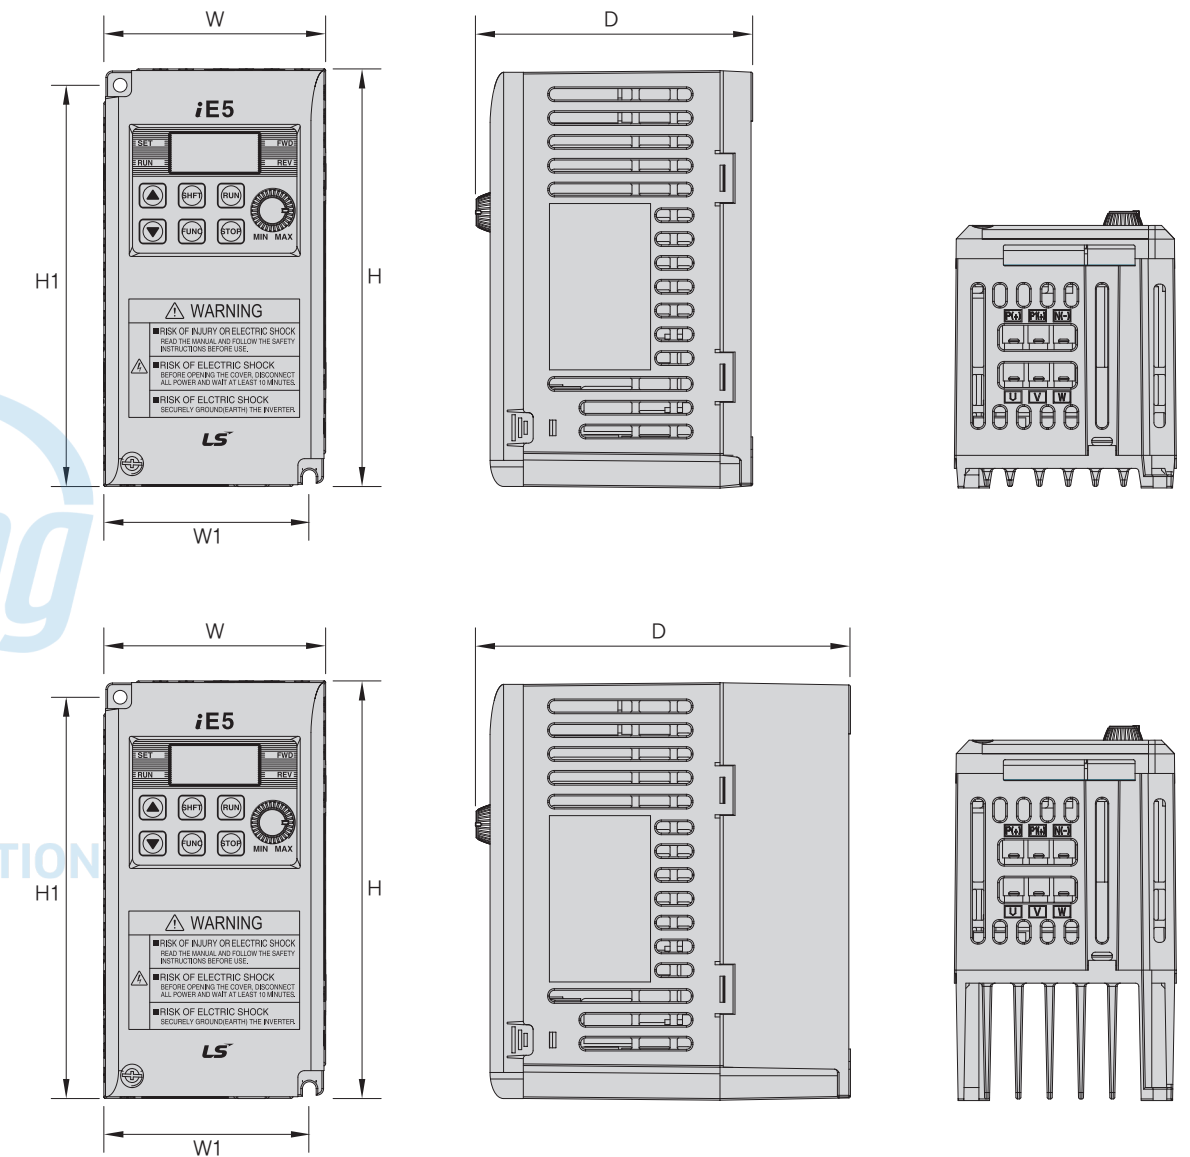

Measure	001 iE5-1	002 iE5-1	004 iE5-1	001 iE5-2	002 iE5-2	004 iE5-2
W	68	68	68	68	68	68
H	128	128	128	128	128	128
D	85	85	115	85	85	115
H1	124	124	124	124	124	124
W1	64	64	64	64	64	64
φ	4.2	4.2	4.2	4.2	4.2	4.2

*Note) Please use the M4 bolt in case this drive is installed into the panels.