HATYOUTG NUX

Timing Relay

#### INSTRUCTION MANUAL

Thank you for purchasing HANYOUNG product.

Please check whether the product is the exactly same as you ordered. Before using the product, please read this instruction manual carefully,

Please keep this manual where you can view at any time

#### HANYOUNGNUX CO.,LTD

28, Gilpa-ro 71beon-gil, Nam-gu, Incheon, Korea TEL: (82-32)876-4697 FAX: (82-32)876-4696

PT. HANYOUNG ELECTRONIC INDONESIA

Jl, cempaka blok F16, No.02 Delta Silicon II Cikarang Bekasi Indonesia TEL: 62-21-8911-8120~4 FAX: 62-21-8911-8126

#### Safety information

Alerts declared in the manual are classified to Danger, Warning and Caution by their criticality

⚠ DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
<b>⚠</b> WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
<b>⚠</b> CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury

# Danger

Do not touch or contact the input/output terminals because they may cause electric shock.

# **∕!**\Warning

- If there is a possibility of an accident caused by errors or malfunctions of this product, install external protection circuit to prevent the accident.
- · This product does not contain an electric switch or fuse, so the user needs to install a separate electric switch or fuse externally. (Fuse rating: 250 V 0.5 A)
- To prevent defection or malfunction of this product, supply proper power voltage in accordance with the rating.
- · After mounting the product onto a panel, please use a socket dedicated to the product when connecting with other units and do not turn on the power until completing wiring to prevent electric shock.
- · Since this is not explosion-proof structure, please use in a place where corrosive gas (such as harmful gas, ammonia, etc.), combustible or explosive gas does not occur.
- · Do not decompose, modify, revise or repair this product. This may cause malfunction, electric shock or fire.
- Attach or detach this product while the power is off. Otherwise, it may cause malfunction or electric shock.

# **∕!**∖Caution

- The contents of this manual may be changed without prior notice.
- · Please check whether the product you purchased is the exactly same as you ordered.
- It you use the product with methods other than specified by the manufacturer, there may be bodily injuries or property damages.
- · Please check whether the product has no damage or abnormality during delivery.
- · Do not use this product at any place with direct vibration or impact.
- · Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents. (Pollution level 1 or 2)
- · Do not polish this product by substances such as alcohol or benzene.
- · Do not use this product at any place with excessive induction trouble, static electricity or magnetic noise.
- · Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation,
- Install this product at place under 2.000m in altitude.
- When the product gets wet, the inspection is essential because there is danger of an electric leakage or fire.
- · If there is an excessive noise from power supply, it is recommended to use insulating transformer and noise filter. The noise filter must be attached to the panel grounded and wiring between the filter output side and power supply terminal should be as short as possible.
- · If gauge cables are arranged too closely, the effect on noise may occur.
- · Do not connect anything to the unused terminals,
- · After checking polarity of terminal, connect wires to the right position.
- · Install a switch or circuit breaker that allows the operator to immediately turn OFF the power, and label it to clearly indicate its function.
- · For the continuous and safe use of this product, the periodic maintenance is recommended.
- · Some parts of this product have limited life span, and others are changed by their usage.
- · The warranty period of this product including parts is one year if this product is properly used
- · When power is on, the preparation period of contact output is required. In case of using signals of external interlock circuit, use a delay Relay.

#### Features

- · Timing Relay (4a4b)
- · Appearance 21.4 (W) X 28 (H) mm Timing relay
- · Plug in type (14 pins)
- Customer sets time range and operation mode.
- Various time range (min/sec : 0.1 sec  $\sim$  60 min, hrs : 0.3 hrs  $\sim$  24 hrs)
- · Multi operation mode (Power ON delay, Interval, Flicker OFF start, Flicker ON start)

#### Suffix code -


Model	Code		Э	Description	
T21-				Timing Relay	
	1			1 sec, 10 sec, 1 min, 10 min	
Time	3			3 sec, 30 sec, 3 min, 30 min	Select by
Range	6		 	6 sec, 60 sec, 6 min, 60 min	DIP switch
	ЗН		1	3 hrs, 6 hrs, 12 hrs, 24 hrs	
Contact	Contact 4		1	4a4b	
Power supply voltage		A20	200 - 230 V a,c		
		D24	24 V d.c		

### Specification -

		10	T01 + 10 10 1011 + 100		
Mod	Model		T21 - 1 / 3 / 6 / 3H - 4A20		
		DC	T21 - 1 / 3 / 6 / 3H - 4D24		
Power supply		AC	200 - 230 V a.c 50/60 Hz		
volta	age	DC	24 V d.c		
Operatin	g voltag	e range	Power supply voltage ±10 %		
Power AC		AC	3.1 VA max (230 V a.c 60 Hz)		
consur	nption	DC	1,5 W max (24 V d,c)		
Re	eset tin	ne	100 ms max		
		1	0.1 sec $\sim$ 10 min		
Tin	ne	3	0.3 sec ~ 30 min		
Ran	ge	6	0.6 sec ~ 60 min		
		3H	0.3 hrs ~ 24 hrs		
Accuracy of operating time		ating time	±1 % FS max		
Se	tting eri	ror	±10 % FS max		
	Output	t mode	Power on delay, Interval, Flicker OFF Start, Flicker ON Start		
Control output	Contact construction		4a4b		
	Сар	acity	250 V a.c 3A Resistive load		
1 :4-			Mechanical: 10 million operations min,		
Lile	expect	ancy	Electrical: 200,000 operations min		
			100 MΩ min (at 500 V d.c, Between current-carrying termin		
Insulati	on resi	stance	and exposed noncurrent-carrying metal parts.)		
D:-1			2000 V a.c 50/60 Hz 1 minute (Between current-carrying		
Dielec	tric str	engin	terminals and exposed noncurrent-carrying metal parts,)		
Nois	e immi	unity	$\pm 2$ kV (Between power terminal, pulse width $\pm 1$ $\mu s$ , square wave noise by noise simulato		
Vibrati	on resis	stance	10 - 55 Hz (For 1 min), Double amplitude 0.75mm, X,Y,Z each direction for 1 hour		
Shock	c resis	tance	300 % X, Y, Z each direction for 3 times		
Ambier	nt temp	erature	-10 $\sim$ 50 $^{\circ}$ C (Without condensation)		
Storage temperature		erature	-25 ~ 65 °C (Without condensation)		
Ambient humidity		midity	35 ~ 85 % RH		
Weight			Approx. 42 g		
			***		

#### Appearance -




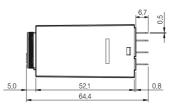



[Unit:mm]


### Part name and function-

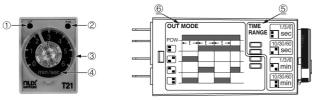


	Name	Function
1	Output ON indicator	After setting time, light ON (Red)
,	lamp (UP)	at the same time with output operation
2	Power indicator lamp (PW)	Light ON after power ON (Green)
3 Time sett	Time a Him or Lorente	Set timer operation time, Setting time can be changed
	Time setting knob	during operation of timer.
4	Time unit	Time unit of setting time (min/sec, hrs).
_	Time range setting	Depend on suffix code, Select time range by DIP
5 (TIM	(TIME RANGE)	switches on the side
6	Operating mode setting (OUT MODE)	Select output mode by DIP switches on the side

### Connection diagram -

■ T21 - 1 / 3 / 6 / 3H - 4A20

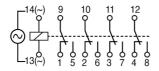

■ T21 - 1 / 3 / 6 / 3H - 4D24

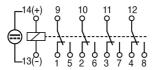

### Time Range -

Model	Time Range	Time setting Range	Setting
	1 sec	0.1 ~ 1 sec	Factory set
T21-1-4A20	10 sec	1 ~ 10 sec	
T21-1-4D24	1 min	0.1 ~ 1 min	
	10 min	1 ~ 10 min	
	3 sec	0.3 ~ 3 sec	Factory set
T21-3-4A20	30 sec	3 ~ 30 sec	
T21-3-4D24	3 min	0.3 ~ 3 min	
	30 min	3 ~ 30 min	
	6 sec	0.6 ~ 6 sec	Factory set
T21-6-4A20	60 sec	6 ~ 60 sec	
T21-6-4D24	6 min	0.6 ~ 6 min	-
	60 min	6 ~ 60 min	
	3 hrs	0.3 ~ 3 hrs	Factory set
T21-3H-4A20	6 hrs	0.6 ~ 6 hrs	
T21-3H-4D24	12 hrs	1.2 ~ 12 hrs	
	24 hrs	2.4 ~ 24 hrs	

<sup>\*</sup> Please turn off power to change Time range

## Operation —

Output Mode	Operation Description	Timing Chart	Setting
Power t Output * t : Set time	When the power is ON, the output will be ON after setting time.	Power         ®-Ø         Set time         Reset time         Set time           Time-limit NC         ①-⑨, ②-⑩, ③-⑪, ④-⑫         —           Time-limit NO         ⑤-⑨, ⑥-⑩, ⑦-⑪, ®-②         —           Output indicator         UP LED           Power on indicator         PW LED	Factory set
Power t Output * t : Set time	When the power is ON, the output is ON and it will be OFF after setting time.	Power	
Flicker OFF-start  Power t t t t t t t t t t t t t t t t t t t	When the power is ON, the output is OFF and it repeatedly outputs OFF and ON with the setting time interval.	Set time   Set time	•
Power t t t t t Output * t : Set time	When the power is ON, the output is ON and it repeatedly outputs ON and OFF with the setting time interval.	Set time   Set time	

<sup>\*</sup> Select output mode by 2 switches at the bottom of the four switches.